

BT-210

**QFX**®

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



**WARNING!**



**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN**

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



**¡ADVERTENCIA!**



**PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado**

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpia solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



**AVERTISSEMENT !**



**POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.**

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRECAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

## BATTERY



The BT-210 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speak should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

## BATTERY

El BT-210 es un altavoz PA recargable que funciona con batería. Asegúrese de haber cargado completamente la batería antes de utilizarlo por primera vez para maximizar su vida útil. Una vez que el adaptador de corriente se conecta a una fuente de alimentación, la carga comienza automáticamente (se necesitan 8 horas para cargar completamente la batería). Incluso si la batería tiene poca carga, se encenderá cuando se conecta a una fuente de alimentación. Cuando la batería se está cargando, el indicador luminoso de la batería se ilumina en rojo. Cuando la batería esté completamente cargada, el indicador luminoso se apagará. Una vez completada la carga, desconecte la unidad. Cuando no se utilice, el altavoz debe estar siempre apagado para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados, la batería perderá gradualmente su energía, por lo que se recomienda cargarla completamente al menos cada 60 días. Cuando la batería está completamente agotada, la unidad no puede funcionar al 100 % del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se recomienda cargarla durante un tiempo antes de utilizarla al 100 % del volumen. La unidad puede funcionar y cargarse con un volumen más bajo. El nivel de volumen aumentará a medida que la unidad se cargue.

## BATTERY

Le BT-210 est un haut-parleur PA rechargeable alimenté par batterie. Assurez-vous que la batterie est complètement chargée avant la première utilisation afin d'optimiser sa durée de vie. Une fois l'adaptateur secteur branché à une source d'alimentation, la charge commence automatiquement (8 heures pour charger complètement la batterie). Même si la batterie est faible, l'appareil s'allume lorsqu'il est branché à une source d'alimentation. Lorsque la batterie est en cours de charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, débranchez l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être mis en position OFF afin d'éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie se décharge progressivement. Il est recommandé de la recharger complètement au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est recommandé de le charger pendant un certain temps avant de l'utiliser à 100 % du volume. L'appareil peut fonctionner et se charger à un volume plus faible. Le niveau de volume augmentera au fur et à mesure que l'appareil se charge.

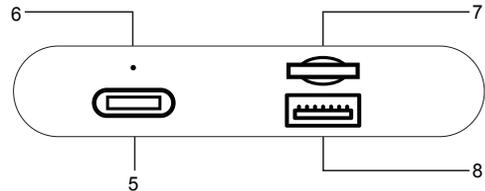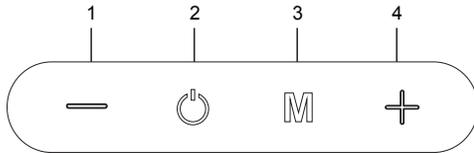

## **FUNCTIONS**

1. Volume down/  
next track
- 2.ON/OFF
- 3.Model key /TWS
- 4.Volume up/  
previous track
- 5.Type-C Charging  
interface
- 6.Indicator light
- 7.TF card interface
- 8.USB interface

## **FUNCIONES**

- 1.Bajar volumen/  
siguiente pista
- 2.ENCENDIDO/APAGADO
- 3.Tecla de modelo /TWS
- 4.Subir volumen/  
pista anterior
- 5.Interfaz de carga tipo C  
interfaz
- 6.Indicador luminoso
- 7.Interfaz de tarjeta TF
- 8.Interfaz USB

## **LES FONCTIONS**

1. Volume bas/  
piste suivante
2. MARCHÉ/ARRÊT
3. Touche modèle /TWS
4. Volume haut/  
piste précédente
5. Interface de chargement  
Type-C interface
6. Voyant lumineux
7. Interface carte TF
8. Interface USB

## **FUNCTIONS**

1. - Button: Press the - button to play the next song, press and hold - to turn down the volume.
2. Power Switch: Press and hold the Power Switch button to turn on or off the device. Power on status, press the button to play/pause. FM mode status, press the button automatic channel search, then press stop channel search, double-press to pause.
3. Mode Key: Press to switch Bluetooth/FM function, press and hold the button to the light conversion, double-press to the TWS function.
4. + Button: Press the + button to play the previous song, press and hold + to turn up the volume.
5. DC 5V Charging Slot: Utilizes a standard Type-C charging cable for powercharging.
6. Indicator Light: When charging the red light of the indicator light is on, and the charging indicator light goes out after the battery is fully charged.
7. TF Slot: Plays MP3 format audio when a TF card is inserted.
8. USB Slot: Plays MP3 format audio when a USB drive is inserted.

## **FUNCIONES**

1. Botón -: pulse el botón - para reproducir la siguiente canción; mantenga pulsado el botón - para bajar el volumen.
2. Interruptor de encendido: mantenga pulsado el botón del interruptor de encendido para encender o apagar el dispositivo. En estado de encendido, pulse el botón para reproducir/pausar. En modo FM, pulse el botón para buscar canales automáticamente; a continuación, pulse para detener la búsqueda de canales y pulse dos veces para pausar.
3. Tecla de modo: pulse para cambiar entre la función Bluetooth y FM, mantenga pulsado el botón para cambiar la luz, pulse dos veces para activar la función TWS.
4. Botón +: pulse el botón + para reproducir la canción anterior, mantenga pulsado + para subir el volumen.

5. Ranura de carga de 5 V CC: utiliza un cable de carga estándar tipo C para la carga eléctrica.
6. Luz indicadora: cuando se está cargando, la luz roja de la luz indicadora está encendida, y la luz indicadora de carga se apaga cuando la batería está completamente cargada.
7. Ranura TF: reproduce audio en formato MP3 cuando se inserta una tarjeta TF.
8. Ranura USB: reproduce audio en formato MP3 cuando se inserta una unidad USB.

## FONCTIONS

1. - Bouton : appuyez sur le bouton - pour passer à la chanson suivante, appuyez et maintenez enfoncé - pour baisser le volume.
2. Bouton d'alimentation : appuyez et maintenez enfoncé le bouton d'alimentation pour allumer ou éteindre l'appareil. En mode allumé, appuyez sur le bouton pour lire/mettre en pause. En mode FM, appuyez sur le bouton pour lancer la recherche automatique des stations, puis appuyez à nouveau pour arrêter la recherche, appuyez deux fois pour mettre en pause.
3. Touche Mode : appuyez pour basculer entre les fonctions Bluetooth/FM, maintenez la touche enfoncée pour changer de lumière, appuyez deux fois pour accéder à la fonction TWS.
4. Bouton + : appuyez sur le bouton + pour lire la chanson précédente, maintenez le bouton + enfoncé pour augmenter le volume.
5. Prise de charge CC 5 V : utilise un câble de charge standard de type C pour la recharge.
6. Voyant lumineux : lors du chargement, le voyant rouge est allumé, puis s'éteint lorsque la batterie est complètement chargée.
7. Emplacement TF : lit les fichiers audio au format MP3 lorsqu'une carte TF est insérée.
8. Emplacement USB : lit les fichiers audio au format MP3 lorsqu'une clé USB est insérée.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AQ4S-RS-436



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfx-usa.com](http://www.qfx-usa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA@,Inc.  
RMA Processing  
Customer Support Department  
2957 E.46th Street | Vernon, CA 90058

 support@qfxusa.com  
 (800) 864-CLUB(2582) or(323) 864-690  
 qfxusa.com  
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for Us Destinations excluding, Hawaii, Alaska and Puerto Rico.For excluded destinations and NON US destinations, please contact the QFX Customer Support Department directly for additional shipping fees and return instructions. If you do not find your Product below, your Product model conflicts with multiple categories,and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix.QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item.If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOTALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE.UNLESS STATED HEREIN,ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE OR DAMAGE,INCLUDING DIRECT, SPECIAL,INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT,WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©

  
1-800-864-2582  
Mon\_Fri 9AM \_ 5PM (PST)

  
support@qfxusa.com  
Mon\_Fri 9AM \_ 5PM (PST)



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your BT-210 Journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

