

RETRO-1980

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

BATTERY

This unit has a built-in rechargeable battery. Connect the included USB-C cable to a USB port that supplies 5V, 1A power source to recharge the unit. Once the red light turns off, that indicates that the device is fully charged.

WARNING

1. Do not expose battery to excessive heat, such as strong sunlight or fire. 2. Do not charge the battery with the adaptor for more than 24 hours. 3. When charging the battery for the first time, charge it for at least 30 minutes, but no longer than 24 hours. 4. Use only the supplied rechargeable battery.

HEARING SAFETY

Caution

To prevent possible hearing damage, do not listen at high volume levels for long periods. Set the volume to a safe level. Be sure to observe the following guidelines when using your headphones or earphone: 1. Listen at reasonable volumes for reasonable periods of time. 2. Do not turn up the volume so high that you can not hear what else is around you. 3. Excessive sound pressure from earphones and headphone can cause hearing loss.

BATERÍA

Esta unidad cuenta con una batería recargable integrada. Conecte el cable USB-C incluido a un puerto USB con una fuente de alimentación de 5 V y 1 A para recargar la unidad. Una vez que la luz roja se apague, indicará que el dispositivo está completamente cargado.

ADVERTENCIA

1. No exponga la batería a calor excesivo, como la luz solar intensa o el fuego. 2. No cargue la batería con el adaptador durante más de 24 horas. 3. Al cargar la batería por primera vez, hágalo durante al menos 30 minutos y no más de 24 horas. 4. Utilice únicamente la batería recargable suministrada.

SEGURIDAD AUDITIVA

Precaución

Para evitar posibles daños auditivos, no escuche a un volumen alto durante períodos prolongados. Ajuste el volumen a un nivel seguro. Asegúrese de seguir las siguientes instrucciones al usar sus auriculares o audífonos: 1. Escuche a un volumen razonable durante períodos de tiempo razonables. 2. No suba el volumen tanto que no pueda oír lo que sucede a su alrededor. 3. La presión sonora excesiva de los auriculares y cascos puede provocar pérdida de audición.

BATTERIE

Cet appareil est équipé d'une batterie rechargeable intégrée. Branchez le câble USB-C fourni sur un port USB 5 V, 1 A pour le recharger. L'extinction du voyant rouge indique que l'appareil est complètement chargé.

AVERTISSEMENT

1. N'exposez pas la batterie à une chaleur excessive, comme les rayons directs du soleil ou le feu. 2. Ne chargez pas la batterie avec l'adaptateur pendant plus de 24 heures. 3. Lors de la première charge, laissez la batterie charger pendant au moins 30 minutes, mais pas plus de 24 heures. 4. Utilisez uniquement la batterie rechargeable fournie.

SÉCURITÉ AUDITIVE

Attention

Pour éviter tout dommage auditif, n'écoutez pas à un volume élevé pendant de longues périodes. Réglez le volume à un niveau sûr. Respectez les consignes suivantes lorsque vous utilisez votre casque ou vos écouteurs : 1. Écoutez à un volume raisonnable pendant des durées raisonnables. 2. Ne montez pas le volume au point de ne plus entendre ce qui se passe autour de vous. 3. Une pression sonore excessive provenant des écouteurs et du casque peut entraîner une perte auditive.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: XHN-RADIO

OPERATING INSTRUCTIONS



1. MIC: Built-in mic to record your voice to tape.
2. TYPE-C PORT: Connect the included USB-C cable to a USB port that supplies 5V, 1A power source to recharge the unit.
3. INDICATOR LIGHT: Visual reference to charging, Bluetooth transmitter and receiver modes.
4. HEADPHONE JACK: Plug in wired headphones or earphone.
5. FUNCTION BUTTON: Slide this switch to choose function - TAPE, Bluetooth transmitter (TX) or Bluetooth connect mode (RX).
6. VOLUME: Thumbwheel control to adjust the volume up or down.
7. STOP: Press to stop the tape.
8. FF/REW: Press to fast forward or rewind the tape.
9. RECORD: Press(12) Record(9) at the same time to start recording on to the cassette tape.
10. PLAY MODE: Slide this switch to the left side (↔) and the tape will play the opposite side automatically once one side has finished. Slide the switch to right side (→) and the tape will stop when both sides have finished.
11. DIR: Select the direction of tape playback. If you want to play the other side of the tape without ejecting it, then you can use this button.
12. PLAY: Press to play the tape. In Bluetooth TX & RX modes, press this button to exit power saving mode.

BLUETOOTH PAIRING

Slide the switch to RX position (blue light flashing). On your mobile device, search for "QFX RETRO-1980" on the device list and pair it. Once connected, the blue light will stop flashing and music will play through the unit.


BLUETOOTH TRANSMITTER

1. In TAPE playback mode, slide the switch to TX position (green light flashing), indicating it enters Bluetooth output mode.
2. Turn on your mobile device (Bluetooth speaker, Bluetooth earbuds, etc.) and select Bluetooth mode in your device's setting, then the TAPE player will automatically be paired with your device. If it has successfully connected, the green light will stop flashing and the music can be streamed to your device.

LOW BATTERY

In Bluetooth Input mode, when rechargeable battery power is close to being depleted, a low battery sound (beep, beep) will be heard indicating that you need to recharge the unit. One minute later you will hear the low battery sound again if you haven't started to recharge the unit. One minute after that, the unit will automatically power OFF. Please note that the low battery warning functions in Bluetooth input mode only. Recharge the unit prior to use in order to assure uninterrupted operation.

INSTRUCCIONES DE FUNCIONAMIENTO

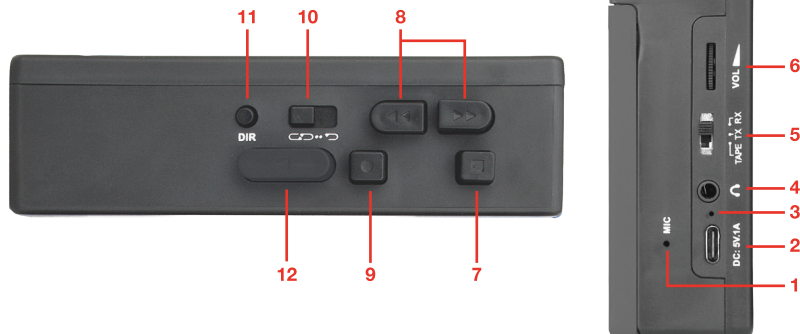

1. MIC: Micrófono integrado para grabar tu voz en cinta.
2. PUERTO TIPO C: Conecta el cable USB-C incluido a un puerto USB con alimentación de 5 V y 1 A para recargar la unidad.
3. LUZ INDICADORA: Referencia visual de los modos de carga, transmisor y receptor Bluetooth.
4. TOMA DE AURICULARES: Conecta auriculares con cable o audífonos.
5. BOTÓN DE FUNCIÓN: Desliza este interruptor para seleccionar la función: CINTA, transmisor Bluetooth (TX) o modo de conexión Bluetooth (RX).
6. VOLUMEN: Rueda para subir o bajar el volumen.
7. DETENER: Pulsa para detener la cinta.
8. FF/REW: Pulsa para avanzar o rebobinar la cinta.
9. GRABAR: Pulse (12) y Grabar (9) simultáneamente para iniciar la grabación en la cinta de casete.
10. MODO DE REPRODUCCIÓN: Deslice este interruptor hacia la izquierda (↶) y la cinta reproducirá automáticamente la cara opuesta una vez que una cara haya terminado. Deslice el interruptor hacia la derecha (↷) y la cinta se detendrá cuando ambas caras hayan terminado.
11. DIR: Selección de la dirección de reproducción de la cinta. Si desea reproducir la otra cara de la cinta sin expulsarla, puede usar este botón.
12. REPRODUCIR: Pulse para reproducir la cinta. En los modos Bluetooth TX y RX, pulse este botón para salir del modo de ahorro de energía.

EMPAJEAMIENTO BLUETOOTH

Deslice el interruptor a la posición RX (luz azul parpadeante). En su dispositivo móvil, busque "QFX RETRO-1980" en la lista de dispositivos y emparejelo. Una vez conectado, la luz azul dejará de parpadear y la música se reproducirá a través de la unidad.


TRANSMISOR BLUETOOTH

1. En el modo de reproducción de cintas, deslice el interruptor a la posición TX (luz verde parpadeante), lo que indica que entra en el modo de salida Bluetooth.
2. Encienda su dispositivo móvil (altavoz Bluetooth, auriculares Bluetooth, etc.) y seleccione el modo Bluetooth en la configuración. El reproductor de cintas se emparejará automáticamente con su dispositivo. Si se ha conectado correctamente, la luz verde dejará de parpadear y podrá transmitir música a su dispositivo.

BATERÍA BAJA

En el modo de entrada Bluetooth, cuando la batería recargable esté a punto de agotarse, se oír un pitido de batería baja (bip, bip) que indica que necesita recargar la unidad. Un minuto después, volverá a oír el sonido de batería baja si no ha comenzado a recargar la unidad. Un minuto después, la unidad se apagará automáticamente. Tenga en cuenta que la advertencia de batería baja solo funciona en el modo de entrada Bluetooth. Recargue la unidad antes de usarla para garantizar un funcionamiento ininterrumpido.

MODE D'EMPLOI

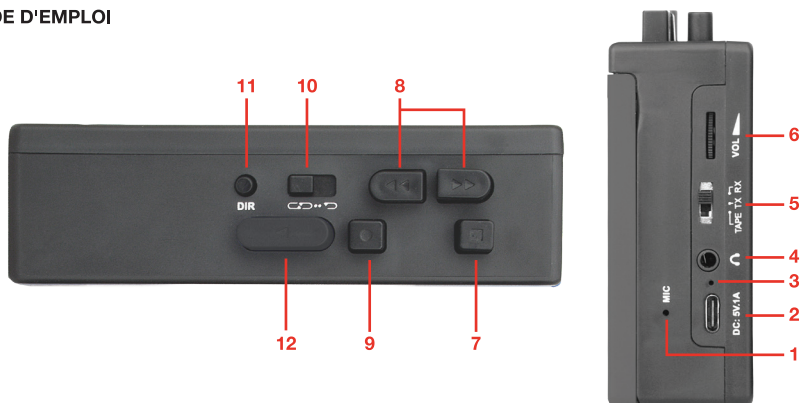

1. MIC : Micro intégré pour enregistrer votre voix sur cassette.
2. PORT TYPE-C : Connectez le câble USB-C fourni à un port USB fournissant une alimentation de 5 V, 1 A pour recharger l'appareil.
3. VOYANT LUMINEUX : Référence visuelle aux modes de charge, d'émetteur et de récepteur Bluetooth.
4. PRISE CASQUE : Branchez un casque ou des écouteurs filaires.
5. BOUTON DE FONCTION : Faites glisser ce commutateur pour choisir la fonction : BANDE, Émetteur Bluetooth (TX) ou Mode de connexion Bluetooth (RX).
6. VOLUME : Molette de commande pour augmenter ou diminuer le volume.
7. STOP : Appuyez pour arrêter la cassette.
8. FF/REW : Appuyez pour avancer ou reculer rapidement.
9. RECORD: Press(12) Record(9) at the same time to start recording on to the cassette tape.
10. PLAY MODE: Slide this switch to the left side() and the tape will play the opposite side automatically once one side has finished. Slide the switch to the right side() and the tape will stop when both sides have finished.
11. DIR : Sélectionnez le sens de lecture de la cassette. Pour lire l'autre face de la cassette sans l'éjecter, utilisez ce bouton.
12. PLAY : Appuyez pour lire la cassette. En modes Bluetooth TX et RX, appuyez sur ce bouton pour quitter le mode économie d'énergie.

APPAIRAGE BLUETOOTH

Positionnez le commutateur sur RX (voyant bleu clignotant). Sur votre appareil mobile, recherchez « QFX RETRO-1980 » dans la liste des appareils et apparaissez-le. Une fois la connexion établie, le voyant bleu cessera de clignoter et la musique sera diffusée.

ÉMETTEUR BLUETOOTH

1. En mode lecture cassette, positionnez le commutateur sur TX (voyant vert clignotant), indiquant que le mode Bluetooth est activé.
2. Allumez votre appareil mobile (enceinte Bluetooth, écouteurs Bluetooth, etc.) et sélectionnez le mode Bluetooth dans les paramètres de votre appareil. Le lecteur cassette sera alors automatiquement appairé avec votre appareil. Une fois la connexion établie, le voyant vert cessera de clignoter et vous pourrez écouter de la musique sur votre appareil.

BATTERIE FAIBLE

En mode d'entrée Bluetooth, lorsque la batterie rechargeable est presque épuisée, un bip sonore (bip, bip) retentit, indiquant que vous devez recharger l'appareil. Une minute plus tard, vous entendrez à nouveau le bip sonore de batterie faible si vous n'avez pas commencé à recharger l'appareil. Une minute plus tard, l'appareil s'éteindra automatiquement. Veuillez noter que l'avertissement de batterie faible ne fonctionne qu'en mode d'entrée Bluetooth. Rechargez l'appareil avant utilisation afin de garantir un fonctionnement ininterrompu.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.





This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product. (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your RETRO-1980 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

