

BT-112

QFX
WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The MODEL is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El MODEL es un altavoz PA con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

BATTERIE

Le MODEL est un haut-parleur de sonorisation alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-132639



- Press and hold the "power" button on the top of the unit for 3 seconds to turn on/off the unit.
- The item should come with enough power to be powered on. If you are having trouble on pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connecting to the item from its type-C charging socket to your computer or charger. The charging input power is 5V 350mA about. The red light will turn off when power charging completes.
- Double click light button to turn it on/off. Click the light button to change its mode.

Bluetooth Mode

1. Once power on, the unit turns default into Bluetooth mode.
2. The unit will automatically connect to the last Bluetooth device firstly. If no found, it will enter pairing mode and wait for a new Bluetooth device to connect.
3. On the Bluetooth device, switch on Bluetooth setting and search for "QFX BT-112". For the first-time connection, select "QFX BT-112" to start connection. If necessary, enter the pass code 0000 or 1234. There is a warning tone once connected successfully.
4. To disconnect the unit from current Bluetooth device, choose to "Disconnect" or "Forget this device" from its connected Bluetooth device. Double click the play/pause button to disconnect the current Bluetooth connection.
5. Click the play/pause button to play or pause the music.
6. Click the "+" or "-" button to switch forwards or backwards to skip songs,
7. Press and hold the "+" or "-" button to adjust the volume.
8. Once connected, you can listen to music from the unit wirelessly (<33feet). The music streaming may be interrupted by obstacles between the device and the speaker, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

TWS Mode:

- Turn on 2pcs units and ensure they are in Bluetooth mode.
- Before using TWS function, please make sure there is no any Bluetooth connection on both two units.
- Press and hold the "M" button on one of the unit to connect or disconnect with each other.
- Once the 2pcs units connected, follow the above step to connect it with your Bluetooth enable devices.


TF /USB:

- Once a TF card/USB drive/ Aux-in is inserted, the unit will turn into music play mode and play music automatically. Press one time the power button to play or pause the music.
- Click the "+" or "-" button to switch forwards or backwards to skip songs.
- Press and hold the "+" or "-" button to adjust the volume.

FM radio

1. Click the "M button " to enter FM radio mode.
2. Insert the provided USB charging cable. This acts as an antenna.
3. Click the play/pause button to start searching through FM channels automatically. When searching finishes it will save all available stations.
4. Click the "+" or "-" button to switch between channels.
5. Press and hold the "+" or "-" button to adjust the volume.

- Mantenga pulsado el botón de encendido en la parte superior del dispositivo durante 3 segundos para encenderlo o apagarlo.
- El dispositivo debería tener suficiente batería para encenderse. Si tiene problemas para emparejarlo o encenderlo, asegúrese de que esté completamente cargado.
- Utilice el cable de carga USB para conectar el dispositivo, a través de su puerto de carga tipo C, a su ordenador o cargador. La potencia de entrada de carga es de aproximadamente 5 V y 350 mA. La luz roja se apagará cuando la carga esté completa.
- Haga doble clic en el botón de luz para encenderla o apagarla. Haga clic en el botón de luz para cambiar de modo.

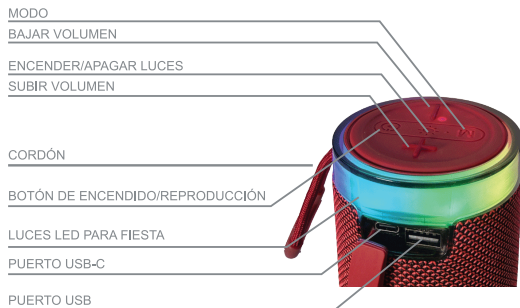

Modo Bluetooth

1. Una vez encendido, el dispositivo entra automáticamente en modo Bluetooth.
2. Se conectará automáticamente al último dispositivo Bluetooth utilizado. Si no lo encuentra, entrará en modo de emparejamiento y esperará a que se conecte un nuevo dispositivo Bluetooth.
3. En el dispositivo Bluetooth, active la configuración de Bluetooth y busque "QFX BT-112". Para la primera conexión, seleccione "QFX BT-112" para iniciar la conexión. Si es necesario, introduzca el código de acceso 0000 o 1234. Se emitirá un tono de aviso una vez que la conexión se haya realizado correctamente.
4. Para desconectar el dispositivo del dispositivo Bluetooth actual, seleccione "Desconectar" u "Olvidar este dispositivo" en la configuración de Bluetooth del dispositivo conectado. Haga doble clic en el botón de reproducción/pausa para desconectar la conexión Bluetooth actual.
5. Haga clic en el botón de reproducción/pausa para reproducir o pausar la música.
6. Haga clic en el botón "+" o "-" para avanzar o retroceder entre las canciones.
7. Mantenga pulsado el botón "+" o "-" para ajustar el volumen.
8. Una vez conectado, podrá escuchar música de forma inalámbrica desde el dispositivo (a menos de 10 metros). La transmisión de música puede verse interrumpida por obstáculos entre el dispositivo y el altavoz, como paredes, carcasas metálicas que cubren el dispositivo u otros dispositivos cercanos que operan en la misma frecuencia.

Modo TWS:

- Encienda las dos unidades y asegúrese de que estén en modo Bluetooth.
- Antes de usar la función TWS, asegúrese de que no haya ninguna conexión Bluetooth activa en ninguna de las dos unidades.
- Mantenga presionado el botón "M" en una de las unidades para conectarlas o desconectarlas entre sí.
- Una vez que las dos unidades estén conectadas, siga los pasos anteriores para conectarlas a sus dispositivos con Bluetooth.

TF/USB/Entrada AUX:

- Una vez insertada una tarjeta TF, una unidad USB o un cable auxiliar, el dispositivo entrará en modo de reproducción de música y reproducirá la música automáticamente. Presione el botón de encendido una vez para reproducir o pausar la música.
- Haga clic en el botón "+" o "-" para avanzar o retroceder entre las canciones.
- Mantenga presionado el botón "+" o "-" para ajustar el volumen.


Radio FM

1. Haz clic en el botón "M" para activar el modo de radio FM.
2. Inserta el cable de carga USB incluido. Este funciona como antena.
3. Haz clic en el botón de reproducir/pausar para iniciar la búsqueda automática de emisoras de FM. Una vez finalizada la búsqueda, se guardarán todas las emisoras disponibles.
4. Haz clic en el botón "+" o "-" para cambiar de emisora.
5. Mantén pulsado el botón "+" o "-" para ajustar el volumen.

- Appuyez et maintenez enfoncé le bouton d'alimentation situé sur le dessus de l'appareil pendant 3 secondes pour l'allumer ou l'éteindre.
- L'appareil devrait être suffisamment chargé pour fonctionner. Si vous rencontrez des difficultés pour l'appairer ou l'allumer, assurez-vous qu'il est complètement chargé.
- Utilisez le câble de charge USB pour connecter l'appareil, via sa prise de charge USB-C, à votre ordinateur ou à un chargeur. La puissance d'entrée de charge est d'environ 5 V 350 mA. Le voyant rouge s'éteint lorsque la charge est terminée.
- Double-cliquez sur le bouton d'éclairage pour l'allumer ou l'éteindre. Cliquez sur le bouton d'éclairage pour changer de mode.

Modo Bluetooth

1. Une fois allumé, l'appareil passe automatiquement en mode Bluetooth.
2. Il se connecte automatiquement au dernier appareil Bluetooth utilisé. Si aucun appareil n'est détecté, il passe en mode appairage et attend la connexion d'un nouvel appareil Bluetooth.
3. Sur votre appareil Bluetooth, activez le Bluetooth et recherchez « QFX BT-112 ». Lors de la première connexion, sélectionnez « QFX BT-112 » pour lancer la connexion. Si nécessaire, saisissez le code PIN 0000 ou 1234. Un signal sonore retentit une fois la connexion établie.

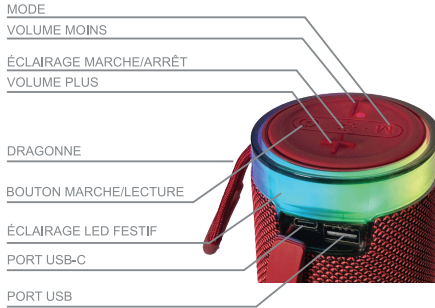

4. Pour déconnecter l'appareil de l'appareil Bluetooth actuellement connecté, sélectionnez « Déconnecter » ou « Oublier cet appareil » sur votre appareil Bluetooth. Double-cliquez sur le bouton lecture/pause pour déconnecter la connexion Bluetooth.
5. Cliquez sur le bouton lecture/pause pour lire ou mettre en pause la musique.
6. Cliquez sur les boutons « + » ou « - » pour passer à la chanson suivante ou précédente.
7. Appuyez et maintenez enfoncé le bouton « + » ou « - » pour régler le volume.
8. Une fois connecté, vous pouvez écouter de la musique sans fil depuis l'appareil (jusqu'à 10 mètres). La diffusion de musique peut être interrompue par des obstacles entre l'appareil et l'enceinte, tels que des murs, un boîtier métallique recouvrant l'appareil ou d'autres appareils à proximité fonctionnant sur la même fréquence.

Mode TWS :

- Allumez les deux appareils et assurez-vous qu'ils sont en mode Bluetooth.
- Avant d'utiliser la fonction TWS, assurez-vous qu'aucune connexion Bluetooth n'est active sur les deux appareils.
- Appuyez longuement sur le bouton « M » de l'un des appareils pour les connecter ou les déconnecter.
- Une fois les deux appareils connectés, suivez les étapes ci-dessus pour les connecter à vos appareils compatibles Bluetooth.

TF/USB/entrée AUX :

- Une fois la carte TF, la clé USB ou le câble auxiliaire inséré, l'appareil passe en mode lecture et diffuse automatiquement la musique. Appuyez une fois sur le bouton d'alimentation pour lire ou mettre en pause la musique.
- Cliquez sur le bouton « + » ou « - » pour passer à la chanson suivante ou précédente.
- Appuyez longuement sur le bouton « + » ou « - » pour régler le volume.

Radio FM

1. Cliquez sur le bouton « M » pour activer le mode radio FM.
2. Insérez le câble de chargement USB fourni. Il sert d'antenne.
3. Cliquez sur le bouton lecture/pause pour lancer la recherche automatique des stations FM. Une fois la recherche terminée, toutes les stations disponibles seront enregistrées.
4. Cliquez sur les boutons « + » ou « - » pour changer de station.
5. Appuyez longuement sur les boutons « + » ou « - » pour régler le volume.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product. (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
 RMA Processing
 Customer Support Department
 2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
 Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
 Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-112 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

