

HP-E190



INSTRUCTION MANUAL

WARNING!

1. Do not drop or crush the product. 2. Avoid exposing the device to liquids. 3. Do not place the device in environments with extreme temperatures (below 0°C or above 45°C). 4. Do not use the device during thunderstorms, as this can cause malfunction and increase the risk of electric shock. 5. Avoid directing the device's indicator light towards the eyes of children or animals. 6. Keep the device away from Wi-Fi routers and other Bluetooth® devices to prevent interference with other 2.4GHz devices. 7. Use the product within the effective range (10m unobstructed). 8. The product is compatible with all mobile phones, laptops, tablets, and desktop computers with Bluetooth capability. 9. Do not charge the case using a fast charger or flash charger. Use a charger with a rated voltage of 5-5.5V, or connect it via a computer USB port. (If the input voltage exceeds 6.5V, the charging case will enter protection mode to prevent internal damage from high voltage).

¡ADVERTENCIA!

1. No deje caer ni aplaste el producto. 2. Evite la exposición del dispositivo a líquidos. 3. No coloque el dispositivo en entornos con temperaturas extremas (inferiores a 0 °C o superiores a 45 °C). 4. No utilice el dispositivo durante tormentas eléctricas, ya que esto puede provocar un mal funcionamiento y aumentar el riesgo de descarga eléctrica. 5. Evite dirigir la luz indicadora del dispositivo hacia los ojos de niños o animales. 6. Mantenga el dispositivo alejado de routers Wi-Fi y otros dispositivos Bluetooth® para evitar interferencias con otros dispositivos de 2,4 GHz. 7. Utilice el producto dentro del alcance efectivo (10 m sin obstrucciones). 8. El producto es compatible con todos los teléfonos móviles, portátiles, tabletas y ordenadores de sobremesa con Bluetooth. 9. No cargue el estuche con un cargador rápido ni un cargador flash. Utilice un cargador con una tensión nominal de 5-5,5 V o conéctelo a través del puerto USB de un ordenador. (Si la tensión de entrada supera los 6,5 V, el estuche de carga entrará en modo de protección para evitar daños internos por alta tensión).

AVERTISSEMENT !

1. Ne laissez pas tomber le produit et ne l'écrasez pas. 2. Évitez d'exposer l'appareil à des liquides. 3. Ne placez pas l'appareil dans des environnements à températures extrêmes (inférieures à 0 °C ou supérieures à 45 °C). 4. N'utilisez pas l'appareil pendant les orages, car cela peut provoquer un dysfonctionnement et augmenter le risque d'électrocution. 5. Évitez de diriger le voyant lumineux de l'appareil vers les yeux des enfants ou des animaux. 6. Eloignez l'appareil des routeurs Wi-Fi et autres appareils Bluetooth® afin d'éviter les interférences avec les appareils 2,4 GHz. 7. Utilisez le produit dans un rayon de 10 m sans obstacle. 8. Le produit est compatible avec tous les téléphones portables, ordinateurs portables, tablettes et ordinateurs de bureau dotés de la technologie Bluetooth. 9. Ne chargez pas le boîtier avec un chargeur rapide ou un chargeur flash. Utilisez un chargeur d'une tension nominale de 5 à 5,5 V ou connectez-le via un port USB d'ordinateur. (Si la tension d'entrée dépasse 6,5 V, le boîtier de charge se mettra en mode de protection pour éviter tout dommage interne dû à une surtension). d'instructions et suivre toutes les précautions telles qu'indiquées.



HP-E190 GUIDE

QUICK CONNECTION GUIDE - ENGLISH

Remove the left (L) and right (R) earphones from the charging compartment. The earphones will automatically turn on and connect, with the main earphone (P) entering pairing mode (red and blue lights flashing alternately). Open your phone's Bluetooth® settings, search "QFX HP-E190" and select it to connect.

WIRELESS PAIRING

Simultaneously press and hold both main earphones for 4 seconds to enter pairing mode (red and blue lights flashing alternately). Wait for about 5-10 seconds for the earphones to successfully pair. After pairing, the main earphone (A) will automatically return to pairing mode, and the lights will continue flashing alternately. Open your phone's Bluetooth® settings and select "QFX HP-E190" to connect.

WIRELESS USE

1. Answer a call: When receiving an incoming call, click the main button to answer.
2. End a call: Press and hold the main button for 1 second to end a call.
3. Music playback: When connected to your mobile phone, click the main button to play music.
4. Music pause: While music is playing, click the main button to pause.
5. Next/Previous song: Press and hold the left earphone (L) to skip to the previous song, and press and hold the right earphone (R) to skip to the next song.
6. Using one earphone separately: Press and hold the main button for about 5 seconds to enter pairing mode (lights flashing alternately). Turn on Bluetooth® on your phone and select "QFX HP-E190" to connect.



HP-E190 OPERATION

CHARGING BOX USE

FUNCTION 1: CHARGING

1. When the earphones are low on battery, place them in the charging case. The white light on the charging case will flash, and the red indicator on the earphones will light up, indicating that they are charging. Once fully charged, the indicator light will turn off. After a short while, the charging case light will also go off to indicate sleep mode.
2. When the charging case is low on battery, place the earphones inside. The charging case light will flash slowly, signaling that the charging case needs to be charged.

FUNCTION 2: STORING EARPHONES

When not in use, place the earphones back in the charging case. The case can charge the earphones 2-3 times before needing a recharge. If the earphones are not used for a long time, charge the charging case before use. The case will store the earphones for an extended period, and its battery will slowly discharge.

PROMPTS

1. Please read the user manual carefully before use and keep it in a safe place.
2. For first-time use, fully charge the product.
3. If the product will not be used for an extended period more than 3 months), please charge it before using it again.
4. Use only a certified C.C.C. charger from a reputable manufacturer.
5. When the earphones' battery is completely discharged, the charging case can recharge them 2-3 times. Always ensure both the case and earphones are fully charged before use after a long period of inactivity.
6. The charging case may lose power slowly when storing the earphones for a long time.



HP-E190 GUÍA

GUÍA DE CONEXIÓN RÁPIDA - INGLÉS

Retire los auriculares izquierdo (L) y derecho (R) del compartimento de carga. Los auriculares se encenderán y conectarán automáticamente, y el auricular principal (P) entrará en modo de emparejamiento (las luces roja y azul parpadearán alternativamente). Abra la configuración de Bluetooth® de su teléfono, busque "QFX HP-E190" y selecciónelo para conectarlo.

EMPAREJAMIENTO INALÁMBRICO

Mantenga presionados simultáneamente ambos auriculares principales durante 4 segundos para acceder al modo de emparejamiento (las luces roja y azul parpadearán alternativamente). Espere de 5 a 10 segundos para que los auriculares se emparejen correctamente. Tras el emparejamiento, el auricular principal (A) volverá automáticamente al modo de emparejamiento y las luces seguirán parpadeando alternativamente. Abra la configuración de Bluetooth® de su teléfono y seleccione "QFX HP-E190" para conectar.

USO INALÁMBRICO

1. Contestar una llamada: Al recibir una llamada entrante, pulse el botón principal para contestar.
2. Finalizar una llamada: Mantenga pulsado el botón principal durante 1 segundo para finalizar una llamada, Mantenga pulsado el botón principal durante 1 segundo para alternar entre el auricular y los auriculares.
3. Reproducción de música: Cuando esté conectado a su teléfono móvil, pulse el botón principal para reproducir música.
4. Pausar la música: Mientras se reproduce música, pulse el botón principal para pausarla.
5. Canción siguiente/anterior: Mantenga pulsado el auricular izquierdo (L) para ir a la canción anterior y el auricular derecho (R) para ir a la siguiente.
6. Usar un auricular por separado: Mantenga pulsado el botón principal durante unos 5 segundos para entrar en el modo de emparejamiento (las luces parpadearán alternativamente). Active Bluetooth® en su teléfono y seleccione «QFX HP-E190» para conectarse.



HP-E190 OPERACIÓN

USO DEL ESTUCHE DE CARGA

FUNCIÓN 1: CARGA

1. Cuando los auriculares tengan poca batería, colóquelos en el estuche de carga. La luz blanca del estuche parpadeará y el indicador rojo se encenderá, indicando que se están cargando. Una vez que la carga esté completa, la luz indicadora se apagará. Tras un breve período, la luz del estuche también se apagará para indicar que están en modo de suspensión.
2. Cuando el estuche de carga tenga poca batería, coloque los auriculares dentro. La luz del estuche parpadeará lentamente, indicando que es necesario cargarlo.

FUNCIÓN 2: ALMACENAMIENTO DE LOS AURICULARES

Cuando no los uses, guarda los auriculares en el estuche de carga. El estuche puede cargarlos de 2 a 3 veces antes de necesitar recargarse. Si no vas a usar los auriculares durante un tiempo prolongado, carga el estuche antes de usarlos. El estuche almacenará los auriculares durante un período prolongado y su batería se descargará lentamente.

INDICACIONES

1. Lea atentamente el manual de usuario antes de usarlos y guárdelo en un lugar seguro.
2. Para el primer uso, cargue completamente el producto.
3. Si no va a utilizar el producto durante un periodo prolongado (más de 3 meses), cárguelo antes de volver a usarlo.
4. Utilice únicamente un cargador certificado C.C.C. de un fabricante de confianza.
5. Cuando la batería de los auriculares esté completamente descargada, el estuche de carga puede recargarlos de 2 a 3 veces. Asegúrese siempre de que tanto el estuche como los auriculares estén completamente cargados antes de usarlos tras un largo periodo de inactividad.
6. El estuche de carga puede perder energía lentamente si los auriculares se guardan durante un tiempo prolongado.



HP-E190 GUIDE

GUIDE DE CONNEXION RAPIDE - FRANÇAIS

Retirez les écouteurs gauche (L) et droit (R) de leur compartiment de charge. Ils s'allumeront et se connecteront automatiquement. L'écouteur principal (P) passera en mode appairage (les voyants rouge et bleu clignoteront alternativement). Ouvrez les paramètres Bluetooth® de votre téléphone, recherchez « QFX HP-E190 » et sélectionnez-le pour vous connecter.

APPAIRAGE SANS FIL

Appuyez simultanément sur les deux écouteurs principaux et maintenez-les enfoncés pendant 4 secondes pour activer le mode d'appairage (les voyants rouge et bleu clignotent alternativement). Patientez 5 à 10 secondes pour que l'appairage soit effectif. Une fois l'appairage terminé, l'écouteur principal (A) repassera automatiquement en mode d'appairage et les voyants continueront de clignoter alternativement. Ouvrez les paramètres Bluetooth® de votre téléphone et sélectionnez « QFX HP-E190 » pour vous connecter.

UTILISATION SANS FIL

1. Répondre à un appel : Lors de la réception d'un appel, appuyez sur le bouton principal pour répondre.
2. Mettre fin à un appel : Maintenez le bouton principal enfoncé pendant 1 seconde pour mettre fin à un appel. Appuyez de nouveau sur le bouton principal pendant 1 seconde pour basculer entre le combiné et les écouteurs.
3. Lecture de musique : Une fois connectés à votre téléphone, appuyez sur le bouton principal pour lancer la lecture.
4. Pause : Pendant la lecture, appuyez sur le bouton principal pour mettre la musique en pause.
5. Pièce suivante/précédent : Maintenez l'écouteur gauche (G) enfoncé pour passer au morceau précédent, et maintenez l'écouteur droit (D) enfoncé pour passer au morceau suivant.
6. Utilisation d'un seul écouteur : Maintenez le bouton principal enfoncé pendant environ 5 secondes pour activer le mode de couplage (les voyants clignotent alternativement). Activez le Bluetooth® sur votre téléphone et sélectionnez « QFX HP-E190 » pour vous connecter.



HP-E190 OPÉRATION

UTILISATION DU BOÎTIER DE CHARGE

FONCTION 1 : CHARGEMENT

1. Lorsque la batterie des écouteurs est faible, placez-les dans le boîtier de charge. Le voyant blanc du boîtier clignote et le voyant rouge des écouteurs s'allume, indiquant qu'ils sont en charge. Une fois la charge complète, le voyant s'éteint. Après quelques instants, le voyant du boîtier s'éteint également pour indiquer le passage en mode veille.
2. Lorsque la batterie du boîtier est faible, placez les écouteurs à l'intérieur. Le voyant du boîtier clignote lentement, signalant qu'il doit être rechargé.

FONCTION 2 : RANGEMENT DES ÉCOUTEURS

Lorsque vous ne les utilisez pas, rangez les écouteurs dans leur étui de chargement. L'étui permet de recharger les écouteurs 2 à 3 fois avant de devoir être rechargé. Si vous n'utilisez pas les écouteurs pendant une période prolongée, rechargez l'étui avant utilisation. L'étui gardera les écouteurs pendant une longue période et sa batterie se déchargera progressivement.

CONSEILS

1. Veuillez lire attentivement le manuel d'utilisation avant utilisation et le conserver en lieu sûr.
2. Lors de la première utilisation, chargez complètement le produit.
3. Si vous n'utilisez pas le produit pendant plus de 3 mois, veuillez le recharger avant de le réutiliser.
4. Utilisez uniquement un chargeur certifié CCC d'un fabricant reconnu.
5. Lorsque la batterie des écouteurs est complètement déchargée, l'étui de chargement permet de les recharger 2 à 3 fois. Après une longue période d'inutilisation, assurez-vous toujours que l'étui et les écouteurs sont complètement chargés avant utilisation.
6. L'étui de chargement peut se décharger lentement si les écouteurs sont rangés pendant une période prolongée.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department. Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects"). Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat



sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God. Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, HP-E190 number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.

RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

- support@qfxusa.com
- (800) 864-CLUB (2582) or (323) 457-9900
- qfxusa.com
- Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product HP-E190 conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or HP-E190 number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY

HANDLING

LABOR

PARTS

Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.
FCC ID: 2AOMX-HP2025S