

80 mm

FRONT

HP-E300



INSTRUCTION MANUAL

WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

¡ADVERTENCIA!

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REMITIR TODO SERVICIO A UN TÉCNICO CALIFICADO.


Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUTION en este manual de instrucciones y seguir todas las precauciones tal como se indican.

AVERTISSEMENT !

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

Product Overview

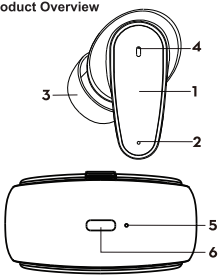

1. Multifunction Touch Control
2. Microphone
3. Ear Cushion
4. LED Indicator
5. LED Charging Indicator
6. USB-C Charging Port

BOX CONTENTS

1 x Wireless Earbuds Charging Case
2 x Wireless Earbuds
1 x USB C Charging Cable
1 x User manual

HP-E300 GUIDE

Functions

Use the multifunction touch control area to operate the wireless earbuds.

POWER ON/OFF

Power ON Tap and Hold for 3 seconds
Power OFF Tap and Hold for 5 seconds

MUSIC FUNCTIONS

Play/Pause 1 Tap
Next Track Right - 3 Taps
Prev Track Left - 3 Taps

VOLUME CONTROL WHILE MUSIC PLAYING

Increase Vol Right - 2 Taps
Decrease Vol Left - 2 Taps

CALLING FUNCTIONS

Answer Call 1 Tap
End Call 1 Tap
Reject Call Tap and hold for 2 seconds

VOICE ASSISTANT

To activate voice assistant tap and hold either earbud for 3 seconds and voice assistant will activate on your device.

HP-E300 OPERATION

PAIRING YOUR EARBUDS


1. Take both earbuds out of the charging case.
2. Their lights will start flashing.
3. After they connect to each other, only one earbud will keep flashing.
4. They're now ready to pair with your phone or device.
5. Turn on Bluetooth on your device.
6. Choose the earbuds (named "QFX HP-E300" on your device) from the Bluetooth list.
7. When paired, the earbud light will turn off.
8. The earbuds will remember devices they've connected to before.
9. When turned on, they'll try to reconnect automatically.
10. They will disconnect if you move more than 10 meters away, and reconnect when you return.
11. If not used for 5 minutes, the earbuds will turn off automatically.

GETTING STARTED & CHARGING

• Put the wireless earbuds into the charging case.
• Plug the USB-C cable into the case and connect it to a USB 5V DC power source.
• The charging case light will flash while it's charging.
• Each earbud will show a red light while charging.
• When the earbuds are fully charged, their red lights will turn off.
• When the case is fully charged, its light will stop flashing and stay solid.
• You'll hear a tone from the earbuds when the battery is low.

HP-E300 GUÍA

DESCRIPCIÓN DEL PRODUCTO

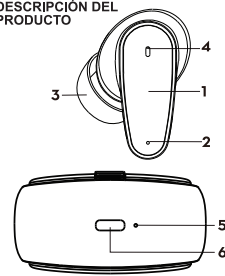

1. Control táctil multifunción
2. Micrófono
3. Almohadilla de oído
4. Indicador LED
5. Indicador de carga LED
6. Puerto de carga USB-C

CONTENIDO DE LA CAJA

1 x Estuche de carga para auriculares inalámbricos
2 x Auriculares inalámbricos
1 x Cable de carga USB-C
1 x Manual de usuario

Funciones

Use el área de control táctil multifunción para operar los auriculares inalámbricos.

ENCENDIDO / APAGADO

Encender Mantenga presionado durante 3 segundos
Apagar Mantenga presionado durante 5 segundos

FUNCIONES MUSICALES

Reproducir/Pausar 1 toque
Siguiente pista derecha 3 toques
Pista anterior izquierda 3 toques

CONTROL DE VOLUMEN MIENTRAS SE REPRODUCE MÚSICA

Subir volumen a la derecha 2 toques
Bajar volumen a la izquierda 2 toques

FUNCIONES DE LLAMADA

Responder llamada 1 toque
Finalizar llamada 1 toque
Rechazar llamada Mantenga pulsado durante 2 segundos

ASISTENTE DE VOZ

Para activar el asistente de voz, mantén presionado cualquiera de los auriculares durante 3 segundos y el asistente de voz se activará en tu dispositivo.

HP-E300 OPERACIÓN

EMPAREJAMIENTO DE SUS AURICULARES

1. Saca ambos auriculares del estuche de carga.
2. Sus luces empezarán a parpadear.
3. Una vez conectados, solo uno de ellos seguirá parpadeando.
4. Ya están listos para emparejarse con tu teléfono o dispositivo.
5. Activa el Bluetooth en tu dispositivo.
6. Selecciona los auriculares (llamados "QFX HP-E300" en tu dispositivo) de la lista de Bluetooth.
7. Una vez emparejados, la luz de los auriculares se apagará.
8. Los auriculares recordarán los dispositivos a los que se han conectado anteriormente.
9. Al encenderlos, intentarán reconectarse automáticamente.
10. Se desconectarán si te alejas más de 10 metros y se volverán a conectar al volver.
11. Si no se usan durante 5 minutos, los auriculares se apagará automáticamente.


PRIMEROS PASOS Y CARGA

• Coloque los auriculares inalámbricos en el estuche de carga.
• Conecte el cable USB-C al estuche y a una fuente de alimentación USB de 5 V CC.
• La luz del estuche de carga parpadeará mientras se carga.
• Cada auricular mostrará una luz roja durante la carga.
• Cuando los auriculares estén completamente cargados, sus luces rojas se apagarán.
• Cuando el estuche esté completamente cargado, su luz dejará de parpadear y permanecerá fija.
• Escuchará un tono de los auriculares cuando la batería esté baja.

BACK

HP-E300 GUIDE

DESCRIPTION DU PRODUIT

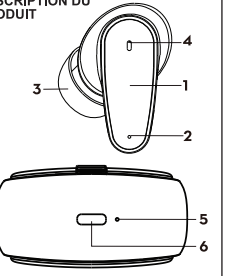

1. Commandes tactiles multifonctions
2. Microphone
3. Coussinets d'oreille
4. Voyant LED
5. Voyant de charge LED
6. Port de charge USB-C

CONTENU DE LA BOÎTE

1 étui de chargement pour écouteurs sans fil
2 écouteurs sans fil
1 câble de chargement USB-C
1 manuel d'utilisation

Fonctions

Utilisez la zone de commande tactile multifonction pour faire fonctionner les écouteurs sans fil.

MARCHE / ARRÊT

Allumer Appuyez et maintenez la pression pendant 3 secondes
Éteindre Appuyez et maintenez la pression pendant 5 secondes

SPECTACLES MUSICAUX

Lecture/Pause 1 pression
Piste suivante (à droite) 3 pressions
Piste précédente (à gauche) 3 pressions

RÉGLAGE DU VOLUME PENDANT L'LECTURE DE MUSIQUE

Augmenter le volume à droite 2 pressions
Diminuer le volume à gauche 2 pressions

FUNCTIONS D'APPEL

Répondre à un appel 1 pression
Raccrocher 1 pression
Rejeter un appel Appuyez longuement pendant 2 secondes

ASISTENTE DE VOZ

Pour activer l'assistant vocal, maintenez la pression sur l'un ou l'autre des écouteurs pendant 3 secondes ; l'assistant vocal s'activera alors sur votre appareil.

HP-E300 OPÉRATION

APPAREJAGE DE VOS ÉCOUTEURS

1. Retirez les deux écouteurs de leur étui de chargement.
2. Leurs voyants se mettent à clignoter.
3. Une fois connectés, un seul voyant continue de clignoter.
4. Ils sont maintenant prêts à être appariés avec votre téléphone ou appareil.
5. Activez le Bluetooth sur votre appareil.
6. Sélectionnez les écouteurs (nommés « QFX HP-E300 » sur votre appareil) dans la liste des appareils Bluetooth.
7. Une fois l'appairage effectué, le voyant des écouteurs s'éteint.
8. Les écouteurs mémorisent les appareils précédemment connectés.
9. À l'allumage, ils tenteront automatiquement de se reconnecter.
10. La connexion se coupe si vous vous éloignez de plus de 10 mètres et se rétablit à votre retour.
11. Après 5 minutes d'inutilisation, les écouteurs s'éteignent automatiquement.

PREMIERS PAS ET CHARGEMENT

• Placez les écouteurs sans fil dans l'étui de chargement.
• Connectez le câble USB-C à l'étui et à une source d'alimentation USB 5 V CC.
• Le voyant de l'étui clignote pendant la charge.
• Chaque écouteur affiche un voyant rouge pendant la charge.
• Lorsque les écouteurs sont complètement chargés, leurs voyants rouges s'éteignent.
• Lorsque l'étui est complètement chargé, son voyant cesse de clignoter et reste allumé en continu.
• Vous entendrez un signal sonore dans les écouteurs lorsque la batterie est faible.

LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department. Subject to the terms and conditions herein, QFX, Inc., (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects"). Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein. This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God. Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period below) that indicates the place of purchase, HP-E300 number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA, Inc.

RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 457-9900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

PRODUCT CATEGORY

Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers
Personal Stereos
Portable Radio/Cassette
Large Portable Radio Cassette
Mobile Audio
Pro Audio SBX Systems
Pro Audio PBX Systems
Televisions
Telephones
Stand Fans
Portable Rechargeable Fans

HANDLING

\$5.00
\$10.00
\$15.00
\$20.00
\$10.00
\$75.00
\$75.00
\$25.00
\$10.00
\$20.00
\$15.00

LABOR

1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year

PARTS

1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year
1 Year

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation. FCC ID: 2AOMX-HP2025S