



INSTRUCTION MANUAL

PBX-814

WARNING/ADVERTENCIA/ATTENTION

WARNING!
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.
To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

¡ADVERTENCIA!
PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO.
Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.
Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

WARNING!
POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.
Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.
Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

PBX-814 BATTERY
The PBX-814 is a Lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adapter is connected to a power source, it will automatically begin charging (4-5 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red. When the battery is fully charged, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.


PBX-814 as an ALTAVOZ PA alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4 a 5 horas para cargar completamente la batería de litio). Incluso si la batería está baja, se encenderá cuando esté conectada a una fuente de alimentación. Cuando la energía de la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería está completamente cargada, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

BATTERIE PBX-814
Le PBX-814 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (4 à 5 heures pour charger complètement la batterie au lithium). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

PBX-814 GUIDE/GUÍA/GUIDE


FUNCTIONS:

1. MIC Volume Knob: Adjust from Min to Max
2. ECHO Knob: Adjust from Min to Max
3. Microphone Input
4. Bass Knob: Adjust from Min to Max
5. Treble Knob: Adjust from Min to Max
6. USB Slot
7. TF Card Slot
8. AUX IN
9. Battery Indicator Light
10. Power Switch: ON/OFF
11. Mode Button: Toggle Between USB, TF, FM, BT by short press, Press and hold to turn light on/off
12. Previous Track Button: Select previous track by short press, press and hold to select / exit Mic Priority
13. Play/Pause Button (TWS connection)
14. Next Track Button: Select next track by short press, press and hold to select/exit Record function
15. Power Supply: DC 5V IN

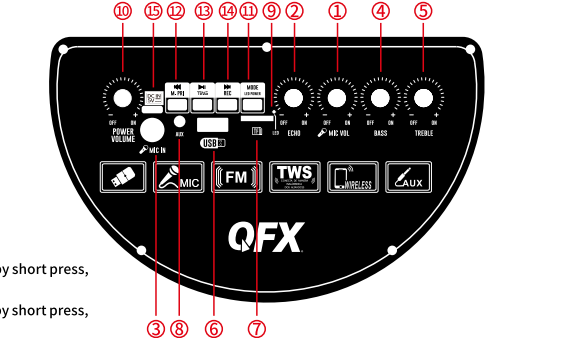

FUNCTIONS:

1. Perilla de volumen del micrófono: ajuste de mínimo a máximo
2. Perilla ECHO: ajuste de mínimo a máximo
3. Entrada de micrófono
4. Perilla de graves: ajuste de mínimo a máximo
5. Perilla de agudos: ajuste de mínimo a máximo
6. Ranura USB
7. Emplacement pour carte TF
8. ENTRADA AUXILIAR
9. Voyant de batterie
10. Interrupteur d'alimentation : ON/OFF Perilla de volumen principal: ajuste de mínimo a máximo
11. Botón de modo: cambie entre USB, TF, FM, BT presionando brevemente, mantenga presionado para encender o apagar la luz
12. Botón de pista anterior: seleccione la pista anterior presionando brevemente, presione y mantenga presionado para seleccionar/salir de la prioridad de micrófono
13. Botón Reproducir/Pausar (conexión TWS)
14. Botón de siguiente pista: seleccione la siguiente pista presionando brevemente, presione y mantenga presionado para seleccionar/salir de la función de grabación
15. Fuente de alimentación: entrada de 5 VCC

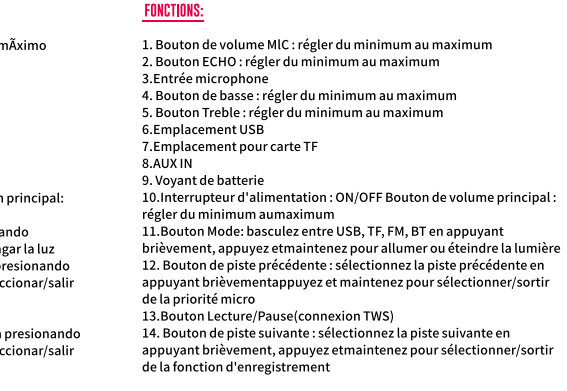

PBX-831 DISPLAY / PANTALLA PBX-831 / AFFICHAGE PBX-831

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive /TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive /TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Short press "play/pause" button for auto scan all channels.

1. Mode of entrance: La pantalla LED mostrará la información del modo de entrada para USB /TF/BT/AUX /FM. Cuando se inserta una unidad de tarjeta de memoria flash USB /TF en la entrada USB /TF, la unidad automáticamente cambiará al modo USB /TF y comenzará la reproducción de archivos de audio .mp3 del flash USB Card unidad /TF.
2. Track Número: El número que se está reproduciendo de la pista USB /TF se mostrará Modo
3. Modo FM: Aquí se muestran todos los canales FM. Presione brevemente el botón "reproducir/pausar" para escanear automáticamente todos los canales.

1. Mode d'entrée: L'écran LED affichera les informations du mode d'entrée pour USB/TF/BT/AUX/FM. Lorsqu'une unité de mémoire flash USB/TF est insérée dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence l'enregistrement. Lisez des fichiers audio .mp3 à partir d'une clé USB /carte TF.
2. Numéro de piste: Le numéro de piste USB/TF en cours de lecture s'affiche.
3. Mode FM : Toutes les chaînes FM s'affichent ici. Appuyez brièvement sur le bouton "play/pause" pour balayer automatiquement tous les canaux.

PBX-814 GUIDE/GUÍA/GUIDE

REMOTE CONTROL

1. **ON** / Standby mode
2. **MODE**: Select USB,TF,FM,AUX, BT
3. **Mute**: Mute Audio
4. **PLAY/PAUSE**
5. **PREV**: Select previous channel
6. **NEXT**: Select next channel.
7. **EQ**: Select EQ mode.
8. **VOL+**: Reduce the master volume
9. **VOL-**: Increase the master volume
10. **REP**: Repeat the playing track.
11. **SCAN**: Press to Scan Channel in FM Mode
12. **0-9**: for selecting the certain track for USB flash drive or TF card.



CONTROL REMOTO

1. **ENCENDIDO** / Modo de espera
2. **MODE**: seleccione USB, TF, FM, AUX, BT
3. **Silenciar** el audio
4. **REPRODUCCIÓN/PAUSA**
5. **Selección** el canal anterior
6. **Selección** el siguiente canal.
7. **EQ**: seleccione el modo EQ.
8. **VOL+**: Reduce el volumen maestro
9. **VOL-**: aumenta el volumen maestro
10. **REP**: repite la pista de reproducción.
11. **SCAN**: presione para escanear canales en modo FM
12. **0-9**: para seleccionar el ciertos pista para unidad flash USB o tarjeta TF.



TÉLÉCOMMANDE

1. **Marche** / Mode veille
2. **selecciónnez** USB, TF, FM, AUX, BT
3. **Couper** le son
4. **LECTURE/PAUSE**
5. **sélectionner** la chaîne précédente
6. **Sélectionnez** la chaîne suivante
7. **EQ**: sélectionnez le mode EQ.
8. **VOL+**: Réduit le volume principal
9. **VOL-**: Augmente le volume principal
10. **REP**: Répète la piste en cours de lecture.
11. **SCAN**: Appuyez pour balayer la chaîne en mode FM
12. **0-9**: pour sélectionner le certain piste pour lecteur flash USB ou carte TF.



PBX-814 OPERATION/OPERACIÓN/OPÉRATION

Sync 2 PBX-814 speakers for True Wireless Stereo (TWS)

1. Turn on both PBX-814 speakers and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/TWS button for 3 seconds on one speaker only to sync both speakers.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS, press and hold the Play/Pause/TWS button.

Sincroniza 2 altavoces PBX-814 para True Wireless Stereo (TWS)

1. Encienda ambos altavoces PBX-814 y habilite el modo Bluetooth en ambos altavoces. Deben leer AZUL.
2. Presione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.

Synchronisez 2 haut-parleurs PBX-814 pour une véritable stéréo sans fil (TWS)

1. Allumez les deux haut-parleurs PBX-814 et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLEU.
2. Appuyez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX PBX-814 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo sans fil.
5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

BLUETOOTH

BLUETOOTH MODE: use the MODE button to enable Bluetooth on the PBX-814. Open the Bluetooth settings on your mobile device and search for QFX PBX-814. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. If you will not need to reconnect Bluetooth when changing modes.

MODU BLUETOOTH: use el botón MODE para habilitar Bluetooth en el PBX-814. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-814. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

MODE BLUETOOTH: utilisez le bouton MODE pour activer Bluetooth sur le PBX-814. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-814. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous assoier et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

FM RADIO / RADIO FM

Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.

PBX-814 OPERATION/OPERACIÓN/OPÉRATION

Sync 2 PBX-814 speakers for True Wireless Stereo (TWS)

1. Turn on both PBX-814 speakers and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/TWS button for 3 seconds on one speaker only to sync both speakers.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS, press and hold the Play/Pause/TWS button.

Sincroniza 2 altavoces PBX-814 para True Wireless Stereo (TWS)

1. Encienda ambos altavoces PBX-814 y habilite el modo Bluetooth en ambos altavoces. Deben leer AZUL.
2. Presione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.

Synchronisez 2 haut-parleurs PBX-814 pour une véritable stéréo sans fil (TWS)

1. Allumez les deux haut-parleurs PBX-814 et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLEU.
2. Appuyez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX PBX-814 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo sans fil.
5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for legal or life-safety application. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOSS PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or resalable substitute to prevent damage to the product. The following information must have a purchase date that falls in the Warranty Period specified in the table below that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc. in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the Customer and will not be processed.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.

PBX-814 OPERATION/OPERACIÓN/OPÉRATION

Sync 2 PBX-814 speakers for True Wireless Stereo (TWS)

1. Turn on both PBX-814 speakers and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/TWS button for 3 seconds on one speaker only to sync both speakers.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS, press and hold the Play/Pause/TWS button.

Sincroniza 2 altavoces PBX-814 para True Wireless Stereo (TWS)

1. Encienda ambos altavoces PBX-814 y habilite el modo Bluetooth en ambos altavoces. Deben leer AZUL.
2. Presione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.

Synchronisez 2 haut-parleurs PBX-814 pour une véritable stéréo sans fil (TWS)

1. Allumez les deux haut-parleurs PBX-814 et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLEU.
2. Appuyez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX PBX-814 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo sans fil.
5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for legal or life-safety application. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOSS PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or resalable substitute to prevent damage to the product. The following information must have a purchase date that falls in the Warranty Period specified in the table below that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc. in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the Customer and will not be processed.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.

PBX-814 OPERATION/OPERACIÓN/OPÉRATION

Sync 2 PBX-814 speakers for True Wireless Stereo (TWS)

1. Turn on both PBX-814 speakers and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/TWS button for 3 seconds on one speaker only to sync both speakers.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS, press and hold the Play/Pause/TWS button.

Sincroniza 2 altavoces PBX-814 para True Wireless Stereo (TWS)

1. Encienda ambos altavoces PBX-814 y habilite el modo Bluetooth en ambos altavoces. Deben leer AZUL.
2. Presione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces.
3. On your mobile device under the Bluetooth menu, search for QFX PBX-814 and connect.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.

Synchronisez 2 haut-parleurs PBX-814 pour une véritable stéréo sans fil (TWS)

1. Allumez les deux haut-parleurs PBX-814 et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLEU.
2. Appuyez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX PBX-814 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo sans fil.
5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for legal or life-safety application. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOSS PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or resalable substitute to prevent damage to the product. The following information must have a purchase date that falls in the Warranty Period specified in the table below that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc. in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the Customer and will not be processed.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-831 journey!
Tag us @QFXUSA to share your stories.

FOLLOW US @QFXUSA



QFX USA®, Inc.
RNA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$30.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR IMPLIED WARRANTIES OR IMPLIED PERSONS OR FIRM ARE VOID EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY. QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2020 ©

1-800-864-2582
Mon-Fri 9AM - 5PM (PST)

support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

www.qfxusa.com