

PBX-265



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The PBX-265 is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El PBX-265 es un altavoz con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarla con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.


BATTERIE

Le PBX-265 est un haut-parleur avec batterie rechargeable. Assurez-vous de charger complètement la batterie avant le premier usage pour maximiser sa durée de vie. Une fois connecté à l'adaptateur de courant à la source d'alimentation, commencera à se charger automatiquement (8 heures pour charger complètement la batterie). Même si la batterie est faible, elle s'allumera lorsqu'elle sera connectée à la source d'alimentation. Lorsque la batterie est chargée, la lumière indicatrice de la batterie est rouge. Lorsque la batterie est complètement chargée, la lumière indicatrice s'éteint. À la fin de la charge, déconnectez l'unité. Lorsque l'unité n'est pas utilisée, le haut-parleur doit toujours être éteint pour éviter que l'unité n'épuise la batterie. Lorsque l'unité n'est pas utilisée pendant de longues périodes, la batterie perdra progressivement son énergie. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement déchargée, l'unité ne peut pas fonctionner à 100% du volume lorsqu'elle est connectée immédiatement à la source d'alimentation. Il est recommandé de charger pendant un certain temps avant de l'utiliser à 100% du volume. L'unité peut fonctionner et se charger avec un volume plus bas. Le niveau de volume augmentera à mesure que l'unité se chargera.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

 FCC ID: 2AWHGTK-6616

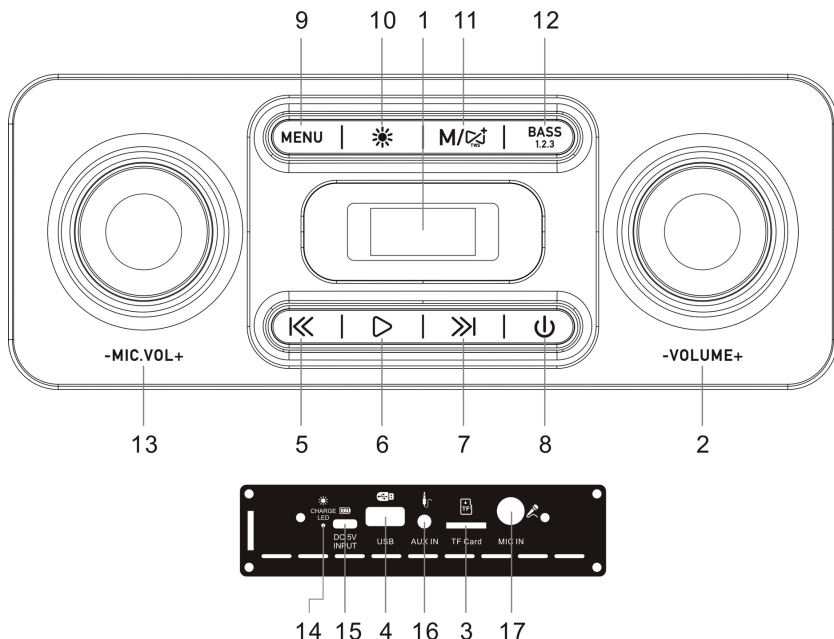

1. LED Screen.
2. Master Volume: In USB/TF/AUX/Bluetooth/FM mode, use it to regulate volume output from the speaker.
3. TF Port: Read audio files in MP3 format in TF card in capacity up to 32G (FAT32).
4. USB Port: Read audio files in MP3 format in USB storage device in capacity up to 32G(FAT32).
5. In ECHO/BASS/TREBLE mode, press and hold the "◀" key to reduce the volume. In the play status of USB/TF Card/Bluetooth, press it to select the previous song. In FM receiving status, press it to select the previous channel after a full station search has been executed.
6. ▶/SCAN: In USB/TF card/Bluetooth reading status, press it to play/pause. In USB/TF card reading status, Press and hold it to select one of four playback sequencing modes (All - play all tracks in sequence; RAND - play in random; ONE - repeat one track; FOL - repeat all tracks in a folder). In FM receiving status, press and hold it to execute a full search (it is recommended to execute at least one full search before using radio receiving function. All founded stations will be saved even in power-off). In AUX input / FM radio status, press it to toggle between mute and normal volume.
7. ▶▶: In ECHO/BASS/TREBLE mode, press and hold the "▶▶" key to increase volume. In USB/TF card/Bluetooth reading status, press to go to the next song. In FM receiving status, press to select the next channel after a full station search has been executed.
8. POWER: Press and hold to switch ON/OFF.
9. MENU: By default the microphone reverb adjustment, In the "MENU" mode, press once for bass adjustment mode, press 3 times for treble adjustment mode, adjust each time for 4 seconds without operation automatically jump back to the microphone reverb adjustment, in each mode, press and hold the "◀" or "▶▶" keys to control each setting.
10. ☀: Press and hold to turn lights on or off. Press to toggle between light modes.
11. MODE/TWS: Press it to toggle between USB/TF/AUX-/Bluetooth/FM receiving modes. TWS interconnection mode: open the two machines that need interconnection at the same time, and switch to bluetooth mode at the same time, Pair one of them with the mobile phone's bluetooth to play music. Press and hold the TWS button on the machines to connect with another machines. After successful connection, synchronous music will be played. Press and hold the TWS button on the machines to exit the interconnection mode.
12. BASS1.2.3: Press to switch between indoor and bass boost and outdoor modes.
13. Microphone volume: Microphone volume regulating knob.
14. Recharging indicator light: When recharger is connected, the red light turns on. When the device is fully recharged, the light turns off.
15. DC 5V recharging: DC 5V recharging port.
16. AUX IN: External sound source input port (plug-and-play).
17. Microphone input: Microphone input jack.

 
CAUTION:
Please charge when battery indicator is low.

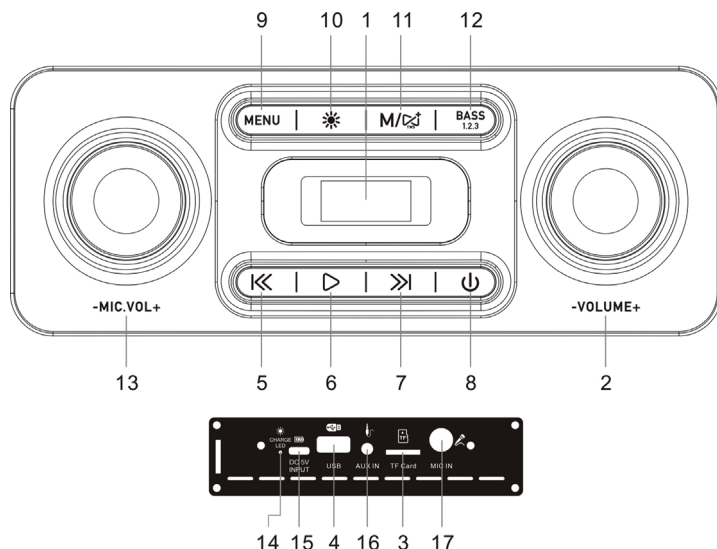

1. Pantalla LED.
2. Volumen Maestro: En los modos USB/TF/AUX/Bluetooth/FM, utilícelo para regular el volumen de salida del altavoz.
3. Puerto TF: Lee archivos de audio en formato MP3 desde una tarjeta TF con una capacidad de hasta 32 GB (FAT32).
4. Puerto USB: Lee archivos de audio en formato MP3 desde un dispositivo de almacenamiento USB con una capacidad de hasta 32 GB (FAT32).
5. En los modos ECHO/BASS/TREBLE, mantenga pulsada la tecla "◀" para reducir el volumen. En el estado de reproducción (USB/Tarjeta TF/Bluetooth), púlsela para seleccionar la canción anterior. En el estado de recepción FM, púlsela para seleccionar el canal anterior una vez que se haya ejecutado una búsqueda completa de emisoras.
6. ▶/SCAN: En el estado de lectura (USB/Tarjeta TF/Bluetooth), púlsela para reproducir/pausar. En el estado de lectura (USB/Tarjeta TF), manténgala pulsada para seleccionar uno de los cuatro modos de secuencia de reproducción (All - reproducir todas las pistas en secuencia; RAND - reproducir aleatoriamente; ONE - repetir una pista; FOL - repetir todas las pistas de una carpeta). En el estado de recepción FM, manténgala pulsada para ejecutar una búsqueda completa (se recomienda realizar al menos una búsqueda completa antes de utilizar la función de radio; todas las emisoras encontradas se guardarán, incluso tras apagar el dispositivo). En el estado de entrada AUX / radio FM, púlsela para alternar entre el silencio (mute) y el volumen normal.
7. ▶ : En los modos ECHO/BASS/TREBLE, mantenga pulsada la tecla "▶" para aumentar el volumen. En el estado de lectura (USB/Tarjeta TF/Bluetooth), púlsela para pasar a la siguiente canción. En el estado de recepción FM, púlsela para seleccionar el canal siguiente una vez que se haya ejecutado una búsqueda completa de emisoras.
8. POWER: Mantenga pulsada la tecla para encender o apagar el dispositivo.
9. MENU: Por defecto, ajusta la reverberación del micrófono. En el modo "MENU", pulse una vez para acceder al ajuste de graves; pulse 3 veces para acceder al ajuste de agudos. Si no se realiza ninguna operación durante 4 segundos en cualquiera de estos modos, el sistema volverá automáticamente al ajuste de reverberación del micrófono. En cada modo, mantenga pulsadas las teclas "◀" o "▶" para controlar cada ajuste.
10. ✱ : Manténgala pulsada para encender o apagar las luces. Púlsela para alternar entre los diferentes modos de iluminación.
11. MODE/TWS: Púlsela para alternar entre los modos de recepción USB/TF/AUX/Bluetooth/FM. Modo de interconexión TWS: Encienda simultáneamente las dos unidades que desea interconectar y cambie ambas al modo Bluetooth al mismo tiempo. Empareje una de ellas con el Bluetooth de su teléfono móvil para reproducir música. Mantenga presionado el botón TWS en una de las unidades para conectarla con la otra. Una vez establecida la conexión, la música se reproducirá de forma sincronizada. Mantenga presionado el botón TWS en cualquiera de las unidades para salir del modo de interconexión.
12. BASS 1.2.3: Presione para alternar entre los modos de interior, refuerzo de graves y exterior.
13. Volumen del micrófono: Perilla de ajuste del volumen del micrófono.
14. Indicador de carga: Cuando se conecta el cargador, se enciende la luz roja. Cuando el dispositivo está completamente cargado, la luz se apaga.
15. Carga DC 5V: Puerto de carga DC 5V.
16. AUX IN: Puerto de entrada para fuentes de audio externas (Plug-and-Play).
17. Entrada de micrófono: Conector de entrada para micrófono.

PRECAUCIÓN:

 Por favor, cargue el dispositivo cuando el indicador de batería muestre un nivel bajo.

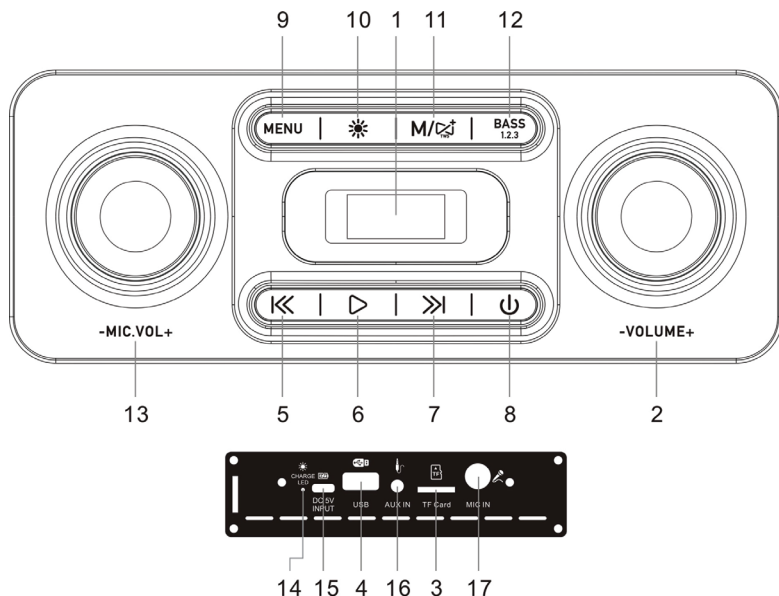

1. Écran LED.
2. Volume principal : En modes USB/TF/AUX/Bluetooth/FM, utilisez ce réglage pour ajuster le volume de sortie de l'enceinte.
3. Port TF : Lit les fichiers audio au format MP3 stockés sur une carte TF d'une capacité maximale de 32 Go (FAT32).
4. Port USB : Lit les fichiers audio au format MP3 stockés sur un périphérique de stockage USB d'une capacité maximale de 32 Go (FAT32).
5. En mode ECHO/BASS/TREBLE, appuyez longuement sur la touche « <<< » pour diminuer le volume. En mode lecture (USB/Carte TF/Bluetooth), appuyez sur cette touche pour sélectionner la piste précédente. En mode réception FM, appuyez sur cette touche pour sélectionner la station précédente une fois la recherche complète des stations effectuée.
6. >>>/SCAN : En mode lecture (USB/Carte TF/Bluetooth), appuyez sur cette touche pour lancer la lecture ou mettre en pause. En mode lecture (USB/Carte TF), appuyez longuement sur cette touche pour sélectionner l'un des quatre modes de lecture séquentielle (All : lire toutes les pistes dans l'ordre ; RAND : lecture aléatoire ; ONE : répéter une seule piste ; FOL : répéter toutes les pistes d'un dossier). En mode réception FM, appuyez longuement sur cette touche pour lancer une recherche complète des stations (Il est recommandé d'effectuer au moins une recherche complète avant d'utiliser la fonction radio ; toutes les stations trouvées seront sauvegardées, même après l'extinction de l'appareil). En mode entrée AUX ou radio FM, appuyez sur cette touche pour basculer entre le mode silencieux (Mute) et le volume normal.
7. >>> : En mode ECHO/BASS/TREBLE, appuyez longuement sur la touche « >>> » pour augmenter le volume. En mode lecture (USB/Carte TF/Bluetooth), appuyez sur cette touche pour passer à la piste suivante. En mode réception FM, appuyez sur cette touche pour sélectionner la station suivante une fois la recherche complète des stations effectuée.
8. POWER : Appuyez longuement pour allumer ou éteindre l'appareil.
9. MENU : Par défaut, ce bouton permet de régler la réverbération du microphone. En mode « MENU », appuyez une fois pour accéder au réglage des basses, et trois fois pour accéder au réglage des aigus. Si aucune action n'est effectuée pendant 4 secondes, le système revient automatiquement au réglage de la réverbération du microphone. Dans chacun de ces modes, appuyez longuement sur les touches « <<< » ou « >>> » pour ajuster le paramètre correspondant.
10. ✨ : Appuyez longuement pour allumer ou éteindre les effets lumineux. Appuyez brièvement pour basculer entre les différents modes d'éclairage.
11. MODE/TWS : Appuyez sur cette touche pour basculer entre les différents modes : USB, Carte TF, AUX, Bluetooth et réception FM. Mode d'interconnexion TWS : Allumez simultanément les deux appareils à interconnecter et basculez-les tous deux en mode Bluetooth. Jumelez l'un des deux appareils avec le Bluetooth de votre téléphone portable pour lancer la lecture de musique. Appuyez longuement sur le bouton TWS de l'un des appareils pour le connecter à l'autre. Une fois la connexion établie, la musique sera diffusée de manière synchronisée. Appuyez longuement sur le bouton TWS de l'un des appareils pour quitter le mode d'interconnexion.
12. BASS 1,2,3 : Appuyez sur ce bouton pour alterner entre les modes « Intérieur », « Amplification des basses » et « Extérieur ».
13. Volume du microphone : Molette de réglage du volume du microphone.
14. Voyant de charge : Lorsque le chargeur est branché, le voyant rouge s'allume. Une fois l'appareil entièrement chargé, le voyant s'éteint.
15. Charge DC 5V : Port de charge DC 5V.
16. AUX IN : Port d'entrée pour source audio externe (Plug-and-Play).
17. Entrée microphone : Prise d'entrée pour microphone.

ATTENTION :

Veuillez recharger la batterie lorsque le voyant est faible.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, PBX-265 number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 457-9900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product PBX-265 conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or PBX-265 number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-265 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

