

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

1. How to read this manual

1.1. How to read this manual

This manual uses illustrations way to illustrate the steps and precautions.

Photos of this manual is only for reference, please prevail in kind. Important Precautions mark, should be read carefully in order to prevent the occurrence of life, injury and other accidents. Special instructions, supplementary explanation, the Prophet and the reference mark. Additional information tags, assist the machine operator.

Tips: When the instructions say and physical description of the function is not the same, the actual functionality prevail.

1.2. Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements:

1. Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
2. To ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
3. To avoid short circuit, do not allow the unit in contact with rainwater.
4. To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
5. Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
6. When the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
7. Never insert objects into the ventilation slots or other openings of the device.
8. Do not use sharp objects come into contact, rub or strike the screen.

1. Cómo leer este manual

1.1. Cómo leer este manual

Este manual utiliza ilustraciones para ilustrar los pasos y precauciones.

Las fotos de este manual son solo para referencia, prevalece en especie. La marca de Precauciones importantes debe leerse atentamente para evitar que se produzcan muertes, lesiones y otros accidentes. Instrucciones especiales, explicación complementaria, el Profeta y la marca de referencia. Etiquetas de información adicional, ayudar al operador de la máquina.

Consejos: cuando las instrucciones dicen que la descripción física de la función no es la misma, prevalece la funcionalidad real.

1.2. Advertencia

Para asegurarse de que usted y su automóvil y la seguridad personal de los demás, asegúrese de cumplir con los siguientes requisitos básicos:

1. Antes de usar esta unidad, lea atentamente todas las instrucciones. Siga las instrucciones como si fueran causadas por la máquina a lo largo del mar, anulará la garantía.
2. Para garantizar la seguridad del tráfico y evitar infringir las normas de tráfico, no mire el programa ni opere la unidad mientras conduce.
3. Para evitar cortocircuitos, no permita que la unidad entre en contacto con agua de lluvia.
4. Para evitar un cortocircuito, no evite ni deje ningún objeto metálico (como monedas o herramientas de metal) dentro del dispositivo.
5. Haga clic aquí para el uso manual de la máquina, la máquina no puede abrir sus propias reparaciones, para la reparación, por favor, mantenimiento profesional de la estación de reparación.
6. Cuando el motor esté apagado, no use el estéreo del automóvil durante mucho tiempo, de lo contrario se quedará sin batería.
7. Nunca inserte objetos en las ranuras de ventilación u otras aberturas del dispositivo.
8. No utilice objetos afilados que entren en contacto, frote o golpee la pantalla.

2. Main interface

2.1. Enable disable host


2.2. Power





When the ignition switch is in the ACC ON position, press the switch panel on the touchscreen [] key to boot.

2.3. OFF

After the host starts, press the switch on the side of the touch screen [] button for 2 seconds, the host will perform the shutdown.

2.4. Main Interface

In the boot mode, the system defaults to enter the radio interface, touch  icon to enter the main interface:

1. Fingers gently sliding around the screen to switch the main community page, press and hold an icon to move the icon position.
2. In other function interface, touch interface [] icon directly return to the previous screen.
3. In other function interface, touch interface [] icon directly return to the main screen.
4. Daemon icon, touch [] icon to see recently opened and run in the background.
5. In the main interface touch [] icon to enter (all applications) interface.
6. With your finger in the upper right area of the main interface to decline, can quickly open the Settings Car Settings Feedback cleanup WLAN Closed Luminance sound function setting interface.
7. In the main interface touch [off-screen] icon, you can turn off the screen, touch to open freely.

2. Interfaz principal

2.1. Habilitar deshabilitar host


2.2. Fuerza





Cuando el interruptor de encendido está en la posición ACC ON, presione el panel de interruptores en la tecla [] de la pantalla táctil para arrancar.

2.3. APAGADO

Después de que se inicie el host, presione el interruptor en el costado de la pantalla táctil [] durante 2 segundos, el host realizará el apagado.

2.4. Interfaz principal

En el modo de arranque, el sistema entra por defecto en la interfaz de radio, toque  el icono para entrar en la interfaz principal:

1. Deslice suavemente los dedos por la pantalla para cambiar la página principal de la comunidad, mantenga presionado un icono para mover la posición del icono.
2. En otra interfaz de función, toque el icono [] de la interfaz para volver directamente a la pantalla anterior.
3. En otra interfaz de función, toque el icono [] de la interfaz para regresar directamente a la pantalla principal.
4. Icono de daemon, toque el icono [] para ver los abiertos recientemente y ejecutarlos en segundo plano.
5. En la interfaz principal, toque el icono [] para ingresar a la interfaz (todas las aplicaciones).
6. Con el dedo en el área superior derecha de la interfaz principal para rechazar, puede abrir rápidamente la interfaz de configuración de la función de sonido de luminancia cerrada WLAN.
7. En la interfaz principal toque el icono [fuera de pantalla], puede apagar la pantalla, toque para abrirla libremente.

3. Video Function Operation

This function can play USB, built-in hard disk connected to the device video file.

1. Product Support video file formats including MPEG, MPG, MP4,3GP, MKV, AVI, FLV and so on.
2. Does not support video playback, because the format is not supported and can not be played.
3. In the [main interface] touch [video] icon to enter the following interface:

as shown below:

During video playback, slide up and down the left hand area to adjust screen brightness, adjust the volume to the right area.



4. Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements:

1. Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
2. To ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
3. To avoid short circuit, do not allow the unit in contact with rainwater.
4. To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
5. Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
6. When the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
7. Never insert objects into the ventilation slots or other openings of the device.
8. Do not use sharp objects come into contact, rub or strike the screen.

3. Operación de la función de video

Esta función puede reproducir USB, disco duro incorporado conectado al archivo de video del dispositivo.

1. Formatos de archivo de video compatibles con productos, incluidos MPEG, MPG, MP4,3GP, MKV, AVI, FLV, etc.
2. No es compatible con la reproducción de video, porque el formato no es compatible y no se puede reproducir.
3. En la [interfaz principal] toque el icono [video] para ingresar a la siguiente interfaz:

Como se muestra abajo:

Durante la reproducción de video, deslice hacia arriba y hacia abajo el área de la mano izquierda para ajustar el brillo de la pantalla, ajuste el volumen en el área de la derecha.



4. Advertencia

Para asegurarse de que usted y su automóvil y la seguridad personal de los demás, asegúrese de cumplir con los siguientes requisitos básicos:

1. Antes de usar esta unidad, lea atentamente todas las instrucciones. Siga las instrucciones como si fueran causadas por la máquina a lo largo del mar, anulará la garantía.
2. Para garantizar la seguridad del tráfico y evitar infringir las normas de tráfico, no mire el programa ni opere la unidad mientras conduce.
3. Para evitar cortocircuitos, no permita que la unidad entre en contacto con agua de lluvia.
4. Para evitar un cortocircuito, no evite ni deje ningún objeto metálico (como monedas o herramientas de metal) dentro del dispositivo.
5. Haga clic aquí para el uso manual de la máquina, la máquina no puede abrir sus propias reparaciones, para la reparación, por favor, mantenimiento profesional de la estación de reparación.
6. Cuando el motor esté apagado, no use el estéreo del automóvil durante mucho tiempo, de lo contrario se quedará sin batería.
7. Nunca inserte objetos en las ranuras de ventilación u otras aberturas del dispositivo.
8. No utilice objetos afilados que entren en contacto, frote o golpee la pantalla.

1. Touch [📞] icon to display a numeric keypad, touch again in a call to exit the numeric keypad.
2. Touch [📞] icon to hang up the phone.
3. Touch [📞] icon audio call to switch to the handset with the car stereo unit.
4. Touch [📞] icon, you can switch silent mode. [📞] You can also hang up directly from your phone.




1. Toque el icono [📞] para mostrar un teclado numérico, toque de nuevo en una llamada para salir del teclado numérico.
2. Toque el icono [📞] para colgar el teléfono.
3. Toque el icono de llamada de audio [📞] para cambiar al auricular con la unidad estéreo del automóvil.
4. Toque el icono [📞], puede cambiar el modo silencioso. [📞] También puede colgar directamente desde su teléfono.

6.3. Phonebook

Touch Bluetooth interface [📞] icon to enter the phone book as follows interface:



1. Touch the bottom right corner [📞] icon to switch outgoing missed incoming calls display interface.
Note: After the connection is successful, the phone sends a request message (BCB-Android wish to access your contacts and call history you want to grant access BCB-Android.ask Privileges?) And press [Enter] on your phone, enter the phone book download, the download is successful, the phone call records and phone book will be displayed in real time to the host Bluetooth device name is not the same, please Shall prevail in kind) touch Bluetooth interface [📞] icon to enter the following interface:
2. Touch [Device Name PIN code] pop-up numeric keypad, you will need to modify the device name PIN code
3. Touch [📞] icon to set the [Automatic Auto Answer] function switch.

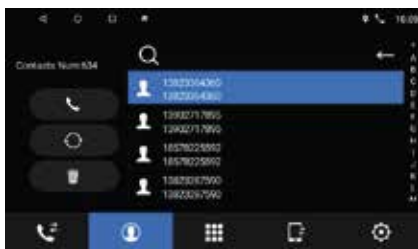

6.3. Directorio telefónico

Toque el icono de la interfaz Bluetooth [📞] para ingresar a la guía telefónica de la siguiente manera:

1. Toque el icono de la esquina inferior derecha [📞] para cambiar la interfaz de visualización de llamadas entrantes perdidas salientes.
Nota: Después de que la conexión sea exitosa, el teléfono envía un mensaje de solicitud (BCB-Android desea acceder a sus contactos e historial de llamadas, ¿quiere otorgar acceso a BCB-Android.ask Privileges?) Y presione [Enter] en su teléfono, ingrese el descarga de la guía telefónica, la descarga es exitosa, los registros de llamadas telefónicas y la guía telefónica se mostrarán en tiempo real en los registros de llamadas y la guía telefónica del host. (Como parte del nombre del dispositivo Bluetooth host no es el mismo, prevalecerá en especie) toque el icono de interfaz Bluetooth [📞] para ingresar a la siguiente interfaz:
2. Toque el teclado numérico emergente [Código PIN del nombre del dispositivo], deberá modificar el código PIN del nombre del dispositivo
3. Toque el icono [📞] para configurar el interruptor de función [Respuesta automática automática].

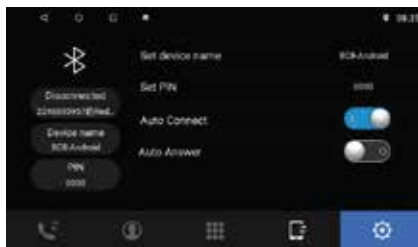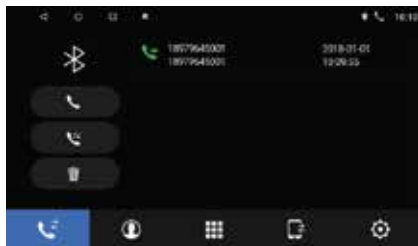


7. Wallpaper Function Operation

In the [main interface] touch [wallpaper] icon to enter the following interface. you can select your favorite wallpaper in the background and drag the wallpaper can browse. then press [Set wallpaper] icon set success.

7. Operación de fondo de pantalla

En la [interfaz principal] toque el icono [fondo de pantalla] para ingresar a la siguiente interfaz. puede seleccionar su fondo de pantalla favorito en el fondo y arrastrar el fondo de pantalla para navegar. luego presione el icono [Establecer fondo de pantalla] para establecer el éxito.

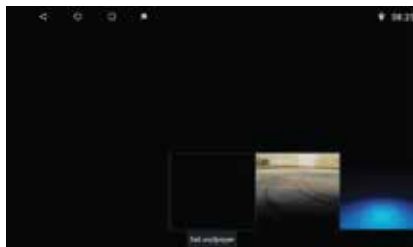

Mechanical parts cleaning spray may affect the device directly on the device. Hard cloth or using a volatile liquid (such as thinner or alcohol) to wipe the surface this may scratch the surface or erase character.

8. Cleaning Equipment

If the surface of the device has a stain, use a clean, soft cloth to remove spots, such as cleaning cloth. If the panel is very dirty, a safe electronic cleaner then use a clean, soft cloth to wipe off the cleaner.

8. Limpieza

Si la superficie del dispositivo tiene una mancha, use un paño limpio y suave para eliminar las manchas, como un paño de limpieza. Si el panel está muy sucio, use un limpiador electrónico seguro y luego use un paño limpio y suave para limpiar el limpiador.



9. Radio Operation

In the [main interface] touch [Radio] icon to enter the radio interface:

9.2. Band Switching

Touch [BAND] icon to switch between FM1 FM2 FM3 AM1 AM2.

9.3. Fine-Tune Search

Press [] and [] icon trimming point by point, long press the manual search, when the search to the radio will automatically stop.

9.4. Automatic Search Storage Radio Stations

1. Long press [] again icon to automatically enter the search state to search stations automatically stored. Touch the search process [] icon to terminate the automatic search for a station.
2. FM band can store 18 radio stations (FM1 FM2 FM3 each 6), AM band can store 12 radio stations (AM1 AM2 each 6)
3. Search, search again after the search will stop automatically."

9. Operación de radio

En la [interfaz principal] toque el icono [Radio] para ingresar a la interfaz de radio:

9.2. Conmutación de banda

Toque el icono [BANDA] para cambiar entre FM1 FM2 FM3 AM1 AM2.

9.3. Búsqueda Precisa

Presione [] y [] icono para recortar punto por punto, mantenga presionada la búsqueda manual, cuando la búsqueda de la radio se detendrá automáticamente.

9.4. Estaciones de radio de almacenamiento de búsqueda automática

1. Mantenga presionado [] nuevamente el icono para ingresar automáticamente al estado de búsqueda para buscar estaciones almacenadas automáticamente. Toque el icono del proceso de búsqueda [] para finalizar la búsqueda automática de una estación.
2. La banda FM puede almacenar 18 estaciones de radio (FM1 FM2 FM3 cada 6), la banda AM puede almacenar 12 estaciones de radio (AM1 AM2 cada 6)
3. Buscar, buscar de nuevo después de que la búsqueda se detenga automáticamente.

10. Bluetooth music function

Bluetooth music function, namely through the audio device to play wireless music files in your phone, provided that this mobile phone must be able to support the corresponding Bluetooth protocol. When the Bluetooth device is connected to the machine After the audio system automatically connect to a paired phone. In the [main interface] Touch [Bluetooth music] icon to enter the following interface:

Because of different phone models and in some cases should start to play audio files through the phone keypad.

11. Dynamic wallpaper function

In [all applications] interface touch [Live Wallpaper] icon to enter the following interface, choose your favorite live wallpaper, drag up and down to browse, then press [Set wallpaper] icon set Set success.


12. Panel Key Functions

Please refer to the physical panels, inquiries about the corresponding key introduction. (Part Function Keys If deviation, please prevail in kind)

1. (Switch Mute)

In the absence of state power, short press to start the host.

1. With panel key case, according to this side of key is no mute function in the boot state, longpress the side of the key is off the host, press the panel key to switch to silent mode.
2. No panel down key scene in the boot mode, press the panel key to switch to silent mode, press key to turn off the host.
2. (main menu) In any application, press to return to the main screen.
3. (Back key) In any application, press to return to the previous menu.
4. (volume up) In any mode, press the volume up.
5. (volume reduction) In any mode, press volume down.

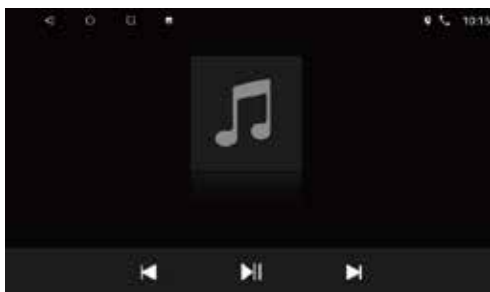

10. Función de música Bluetooth

Función de música Bluetooth, es decir, a través del dispositivo de audio para reproducir archivos de música inalámbricos en su teléfono, siempre que este teléfono móvil sea compatible con el protocolo Bluetooth correspondiente. Cuando el dispositivo Bluetooth está conectado a la máquina Después de que el sistema de audio se conecte automáticamente a un teléfono emparejado. En la [interfaz principal] Toque el icono [Música Bluetooth] para ingresar a la siguiente interfaz:

Debido a los diferentes modelos de teléfonos y en algunos casos, debe comenzar a reproducir archivos de audio a través del teclado del teléfono.

11. Función de fondo de pantalla dinámico

En la interfaz [todas las aplicaciones], toque el icono [Fondo de pantalla en vivo] para ingresar a la siguiente interfaz, elija su fondo de pantalla en vivo favorito, arrastre hacia arriba y hacia abajo para navegar, luego presione el conjunto de íconos [Establecer fondo de pantalla] Establecer éxito.

12. Funciones de las teclas del panel

Consulte los paneles físicos, consultas sobre la introducción clave correspondiente. (Teclas de función de parte Si hay desviación, prevalece en especie)

1. (Silenciar interruptor)

En ausencia de poder estatal, presione brevemente para iniciar el host.

1. Con el caso de la tecla del panel , de acuerdo con este lado de la tecla no hay función de silencio en el estado de arranque, mantenga presionado el lado de la tecla está fuera del host, presione la tecla del panel para cambiar al modo silencioso.
2. No hay escena de la tecla hacia abajo del panel en el modo de arranque, presione la tecla del panel para cambiar al modo silencioso, presione la tecla .
2. (menú principal) En cualquier aplicación, presione para volver a la pantalla principal.
3. (Tecla Atrás) En cualquier aplicación, presione para regresar al menú anterior.
4. (subir volumen) En cualquier modo, presione subir volumen.
5. (reducción de volumen) En cualquier modo, presione bajar volumen.



13. Music functional operation

1. This function can play USB, built-in hard disk connected device audio files.
2. The product supports music file formats including MP3, M4A, WAV, AMR, WMA, OGG, AAC, MID and so on.
3. does not support music playback, may be prompted to format does not support can not be played.
4. In the (main interface) touch (music) icon to enter the following
5. Touch and icon to perform the song next song played.
6. Touch icon to switch between pause play.
7. Touch icon, scanning the list of songs.
8. Touch icon to switch between open loop repeat a single in a repeat all random.

14. Figure quick browsing operation

This function can be USB, internal hard disk connected to your device for viewing image editing.

1. The product supports image file formats including JPG, PNG, BMP, JPEG and the like.
2. Unsupported image format player, because the format is not supported and can not be played.
3. In [all applications] interface touch [Express plans] icon to enter the following interface:
4. Touch the top of the icon to select the album activities and other options.
5. Touch icon to set the lamination Grid List file browsing albums effects.
6. Touch icon to set the sort Add show hidden items and other options.

Note:

1. Touch , click [Settings] - [General]- Select [contains video files], you can play video files; when there is no check on [contains video files], video files, unable to display.
2. Part of the picture can not edit text Rotate Left or Rotate Right, so it will not display this function icons.

13. Funcionamiento funcional de la música

1. Esta función puede reproducir archivos de audio del dispositivo USB, disco duro integrado conectado.
2. El producto admite formatos de archivos de música, incluidos MP3, M4A, WAV, AMR, WMA, OGG, AAC, MID, etc.
3. no es compatible con la reproducción de música, es posible que se le solicite formatear no es compatible no se puede reproducir.
4. En la (interfaz principal) toque el ícono (música) para ingresar lo siguiente
5. Toque el ícono y para ejecutar la siguiente canción reproducida.
6. Toque el ícono para cambiar entre reproducción en pausa.
7. Toque el ícono , explorando la lista de canciones.
8. Toque el ícono para alternar entre la repetición de bucle abierto, una sola y una repetición aleatoria.

14. Figura operación de navegación rápida

Esta función puede ser USB, disco duro interno conectado a su dispositivo para ver la edición de imágenes.

1. El producto admite formatos de archivo de imagen, incluidos JPG, PNG, BMP, JPEG y similares.
2. Reproductor de formato de imagen no compatible, porque el formato no es compatible y no se puede reproducir.
3. En la interfaz [todas las aplicaciones], toque el ícono [Planes Express] para ingresar a la siguiente interfaz:
4. Toque la parte superior del ícono para seleccionar las actividades del álbum y otras opciones.
5. Toque el ícono para configurar los efectos de álbumes de exploración de archivos de la Lista de cuadrícula de laminación.
6. Toque el ícono para configurar el orden Agregar mostrar elementos ocultos y otras opciones.


Nota:

1. Toque el ícono , haga clic en [Configuración] - [General] - Seleccione [contiene archivos de video], puede reproducir archivos de video; cuando no hay verificación de [contiene archivos de video], los archivos de video no se pueden mostrar.
2. Parte de la imagen no puede editar el texto Girar a la izquierda o Girar a la derecha, por lo que no mostrará los iconos de esta función.

15. Set Function Operation

15.1 SET FUNCTION OPERATION


In [all applications] interface touch [Settings] icon to enter the following interface:

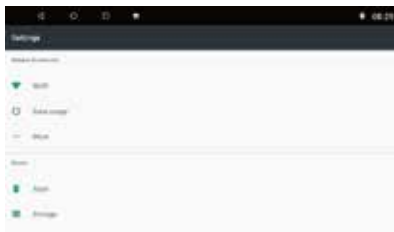

15.2 WLAN Settings

Opening and closing WLAN

Touch [WLAN] next to the button to open the WLAN, WLAN open later, if you are surrounded by WLAN network in the list on the right column will be searched. The following interface:

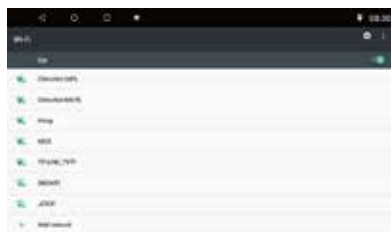

The figure above, to search for the source name (on the router, this name is called the SSID, they can be set, is generally not recommended set to Chinese) small print below plus wireless WLAN Tight manner, each name behind the fan icon indicates the WLAN signal strength, if the fan next to the graphic added a small lock indicating signal is encrypted, you need to enter a password before they can connect.

Connectivity Wireless WLAN

Search to wireless WLAN if not encrypted, it will automatically connect after open WLAN. If there is encryption, click on the wireless WLAN name, a password will automatically pop up a window, generally only need to enter your password and click on the bottom right of the Connect button to connect. Check the lower-left corner of the Show advanced options later, there will be more detailed settings, when connecting this function can be selected according to their needs: Proxy: Default None (no access to general, will not be here, say so), IP settings: The default is DHCP, automatically obtain IP address. When elected as static, you can manually enter the IP address. Data usage can query traffic usage and other functions.

15.3 More Settings

Tethering portable hotspot:

Touch [Setup] icon WLAN hotspot, enter the following interface:

To modify the network SSID security password, touch [Save] to set success. Mobile Network: can be set to enable data network, mobile data network roaming capabilities and other options; touch [mobile network] icon to enter the following interface:



15.4 Language Input


Settings page in touch [Language input] icon to enter the following interface:

1. Language Settings page includes selecting a language, keyboard and input method settings.
2. Product interface language support for Chinese, traditional Chinese and English.
3. Touch [iFlyTek input method] icon to the right, you can set the input settings, keyboard settings, set up voice, handwriting settings, restore the default settings, and other functions.



15.5 Date and time settings

Set interface touch [Date and Time] icon to enter the following interface; you need to set the date, time, time zone, in the corresponding interface in touch [completed] icon to set Set success."

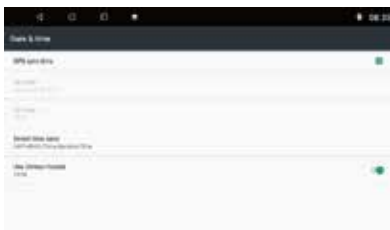


15.6 version number information

Settings page in touch (on vehicle computer) icon, you can view the Android version revision number.

15. Operación De La Función De Configuración

15.1 Funcionamiento De La Función De Configuración


En la interfaz [todas las aplicaciones], toque el icono [Configuración] para ingresar a la siguiente interfaz:

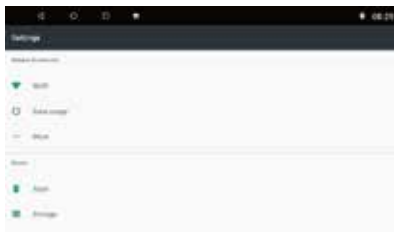

15.2 Configuración de WLAN

Apertura y cierre de WLAN

Toque [WLAN] al lado del botón para abrir la WLAN, se buscará la WLAN abierta más tarde, si está rodeado por una red WLAN en la lista de la columna derecha. La siguiente interfaz:

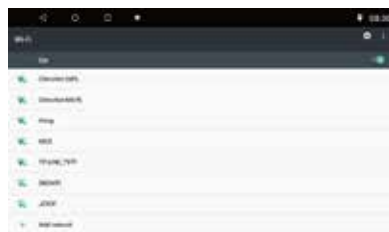

La figura de arriba, para buscar el nombre de la fuente (en el enrutador, este nombre se llama SSID, se pueden configurar, generalmente no se recomienda configurar en chino) letra pequeña a continuación más WLAN inalámbrica Manera estrecha, cada nombre detrás del icono del ventilador indica la intensidad de la señal WLAN, si el ventilador junto al gráfico agregó un pequeño candado que indica que la señal está encriptada, debe ingresar un contraseña antes de que puedan conectarse.

Conectividad inalámbrica WLAN

Busque WLAN inalámbrica si no está encriptada, se conectará automáticamente después de abrir WLAN. Si hay encriptación, haga clic en el nombre de la WLAN inalámbrica, una contraseña aparecerá automáticamente en una ventana, generalmente solo necesita ingresar su contraseña y hacer clic en la parte inferior derecha del botón Conectar para conectarse. Verifique la esquina inferior izquierda de Mostrar opciones avanzadas más adelante, habrá configuraciones más detalladas, al conectar esta función se puede seleccionar de acuerdo a sus necesidades: Proxy: Predeterminado Ninguno (sin acceso a general, no estará aquí, dígalos) . Configuración de IP: el valor predeterminado es DHCP, obtiene automáticamente la dirección IP. Cuando se elige como estática, puede ingresar manualmente la dirección IP. El uso de datos puede consultar el uso del tráfico y otras funciones.

15.3 Más configuraciones

El atar y zona Wi-Fi:

Toque el icono [Configurar] Punto de acceso WLAN, ingrese a la siguiente interfaz:

Para modificar la contraseña de seguridad del SSID de la red, toque [Guardar] para establecer el éxito. Red móvil: se puede configurar para habilitar la red de datos, las capacidades de roaming de la red de datos móviles y otras opciones; toque el icono [red móvil] para ingresar a la siguiente interfaz:



15.4 Entrada De Idioma

En la página de configuración, toque el icono [Ingreso de idioma] para ingresar a la siguiente interfaz:

1. La página Configuración de idioma incluye la selección de una configuración de idioma, teclado y método de entrada.
2. Soporte de idioma de la interfaz del producto para chino, chino tradicional e inglés.
3. Toque el icono [Método de entrada iFlyTek] a la derecha, puede establecer la configuración de entrada, la configuración del teclado, configurar la voz, la configuración de escritura a mano, restaurar la configuración predeterminada y otras funciones.



15.5 Configuración De Fecha Y Hora

Establecer interfaz toque el icono [Fecha y hora] para ingresar a la siguiente interfaz; debe configurar la fecha, la hora, la zona horaria, en la interfaz correspondiente en el icono táctil [completado] para configurar el éxito.



15.6 Información Del Número De Versión

En la página de configuración en el icono táctil (en la computadora del vehículo), puede ver el número de revisión de la versión de Android.

16. ■ Optional Feature Operation

16.1 AUX function operation (optional)

Video input jack plug to connect the input video input, audio input plug to connect the input audio input jack.

16.2 T-V functional operation (optional)

When the unit is connected to a plug-in digital TV boxes in the [main interface] touch [T-V] icon to start the digital TV function. See detailed functional user interface, says digital TV operations Bright.

16.3 ES File Browser function operation

In [all applications] interface touch [ES File Explorer] icon to enter the ES file browser interface.

Favorites: You can access news, weather, documents, videos, apps, music and other web via wifi

Local: ES will automatically navigate to the root directory of the storage.

USB file manager, a variety of file operations, multi-select multiple file view options and more powerful clipboard functions, search function.

Library: insert U disk, you can view pictures, music, video playback and other functions.

Network: Users can my network, LAN, network disk, FTP browsing and other functions to transfer, copy cut delete, rename files and folders, etc., can also back up system The system software has been installed.

16.4 Toolbox function operation (optional)

In [all applications] interface touch [Toolbox] icon to enter the Toolbox interface.

Cache clear: clean up or remove your unwanted files:

1. Touch a key clean-up icon to delete the memory unwanted junk files, view the next host the remaining space used space capacity.

2. Click Apply icon in the icon drop-down video music files map Select Delete and radio delete.

GPS Monitor: You can view the GPS status parameters Glonss Compass and state parameters.

One Click Setup: Choose the file you want to install touch One Click Setup icon to install, such as no installation, touch Exit icon

16.5 function Operating Instructions

In [all applications] touch [specification] icon to enter Manual operation interface, gently slide to the left to the right at the interface

with your fingers, you can switch the next interface. (Note: there Describes some of the

features the host operating instructions)

16. ■ Peración De Funciones Opcionales

16.1 Funcionamiento de la función AUX (opcional)

Conector de entrada de video para conectar la entrada de video de entrada, conector de entrada de audio para conectar el conector de entrada de audio de entrada.

16.2 Operación funcional T-V (opcional)

Cuando la unidad está conectada a una caja de TV digital enchufable en la [interfaz principal], toque el icono [T-V] para iniciar la función de TV digital. Vea la interfaz de usuario funcional detallada, dice operaciones de TV digital Bright.

16.3 Funcionamiento de la función Explorador de archivos ES

En la interfaz [todas las aplicaciones], toque el icono [ES File Explorer] para ingresar a la interfaz del explorador de archivos ES.

Favoritos: puede acceder a noticias, clima, documentos, videos, aplicaciones, música y otra web a través de wifi

Local: ES navegará automáticamente al directorio raíz del almacenamiento.

Administrador de archivos USB, una variedad de operaciones de archivos, selección múltiple de múltiples opciones de visualización de archivos y funciones de portapapeles más potentes, función de búsqueda.

Biblioteca: inserte el disco U, puede ver imágenes, música, reproducción de video y otras funciones.

Red: Los usuarios pueden transferir mi red, LAN, disco de red, navegación FTP y otras funciones, copiar, cortar, eliminar, renombrar archivos y carpetas, etc., también pueden hacer una copia de seguridad del sistema. El software del sistema se ha instalado.

16.4 Funcionamiento de la función Toolbox (opcional)

En la interfaz [todas las aplicaciones], toque el icono [Caja de herramientas] para acceder a la interfaz de la Caja de herramientas.

Borrado de caché: limpie o elimine sus archivos no deseados:

Toque un icono de limpieza clave para eliminar los archivos basura no deseados de la memoria, ver el siguiente host, la capacidad de espacio utilizada restante.

Haga clic en el icono Aplicar en el mapa de archivos de música de video desplegable de iconos. Seleccione Eliminar y radio eliminar.

Monitor GPS: Puede ver los parámetros de estado del GPS Glonss Compass y los parámetros de estado.

Configuración con un clic: Elija el archivo que desea instalar, toque el icono Configuración con un clic para instalar, como sin instalación, toque el icono Salir.

16.5 Instrucciones de funcionamiento de la función

En [todas las aplicaciones] toque el icono [especificación] para ingresar a la interfaz de operación manual, deslice suavemente hacia

la izquierda a la derecha en la interfaz con los dedos, puede cambiar la siguiente interfaz. (Nota: allí Describe algunos de los

incluye las instrucciones de funcionamiento del host)

17. ■ Navigation operations

17.1 Navigation operations

In the [main interface] touch [Navigation] icon to enter the navigation interface. By pressing the panel [] key to exit the navigation screen, switch to the main screen. After exiting the navigation interface, the background will continue to maintain navigation.

17.2 Before The Navigation Instructions

1. Make sure that the host and the satellite antenna is connected properly, switched within a period of time, satellite antennas need to receive satellite signals and update the information, you can wait for a while to work this time Screen status bar displays the satellite has registration marks.
2. Make sure that the vehicle is not in the position of the satellite signal receiving bad places, such as tunnel, bridge, next to the tall buildings and the like.
3. Driver to be pre-set navigation destination in the parking state, the process of moving Do not operate the navigation.

17.3 Navigation Map Description

because of urban construction and the rapid development of road transport, the company will continue to update the navigation map navigation map, please keep abreast of updated navigation map information is updated, if found to navigation Map of route guidance with actual road conditions or traffic control situation is not, according to the actual road conditions, traffic control and traffic rules drive the vehicle.

17.4 Navigation Map Description

1. You can find all kinds of search functions based on navigation software needs to reach the destination, set the destination, start planning the path, a navigation.
2. In the driver more familiar area, driving their own choice may be more suitable than driving situation path may be higher than the navigation software navigation planning.
- 3.

17.5 Error

Satellite signal reception errors under normal circumstances, at about 7 meters, and in some cases, the timely adoption of this software product may still bias automatically corrected, then please note that the driver View Police to be driving the actual road conditions prevail.

Note:

*Navigation system environment is complex, it may be due to large external electromagnetic interference caused by operation error, navigation is not working properly (if not into a map, GPS and so no image).Restart GPS can enter normal operation.**

17. ■ Peraciones De Navegación

17.1 Operaciones de navegación

En la [interfaz principal] toque el icono [Navegación] para ingresar a la interfaz de navegación. Pulsando la tecla del panel [] para salir de la pantalla de navegación, cambie a la pantalla principal. Después de salir de la interfaz de navegación, el fondo continuará manteniendo la navegación.

17.2 Antes de las instrucciones de navegación

Asegúrese de que el host y la antena satelital estén conectados correctamente, cambiados dentro de un período de tiempo, las antenas satelitales necesitan recibir señales satelitales y actualizar la información, puede esperar un tiempo para trabajar esta vez La barra de estado de la pantalla muestra que el satélite tiene registro marcas.

Asegúrese de que el vehículo no esté en la posición de recepción de la señal del satélite en lugares inadecuados, como túneles, puentes, junto a edificios altos y similares.

Conductor para ser destino de navegación preestablecido en el estado de estacionamiento, el proceso de movimiento No opere la navegación.

17.3 Descripción del mapa de navegación

debido a la construcción urbana y al rápido desarrollo del transporte por carretera, la empresa continuará actualizando el mapa de navegación del mapa de navegación, manténgase al tanto de la información actualizada del mapa de navegación, si se encuentra en el mapa de navegación de la guía de ruta con las condiciones reales de la carretera o el control del tráfico la situación no es, de acuerdo con las condiciones reales de la carretera, el control del tráfico y las normas de tráfico conducen el vehículo.

17.4 Descripción del mapa de navegación

Puede encontrar todo tipo de funciones de búsqueda basadas en las necesidades del software de navegación para llegar al destino, establecer el destino, comenzar a planificar la ruta, una navegación.

En el área más familiar del conductor, conducir su propia elección puede ser más adecuado que la ruta de la situación de conducción puede ser más alta que la planificación de navegación del software de navegación.

17.5 Error

Los errores de recepción de la señal satelital en circunstancias normales, a unos 7 metros, y en algunos casos, la adopción oportuna de este producto de software aún puede corregirse automáticamente, luego tenga en cuenta que el conductor View Police para conducir las condiciones reales de la carretera prevalecen.

Nota:

El entorno del sistema de navegación es complejo, puede deberse a una gran interferencia electromagnética externa causada por un error de operación, la navegación no funciona correctamente (si no está en un mapa, GPS y, por lo tanto, no hay imagen). Reiniciar GPS puede entrar en funcionamiento normal.*

18. Car Settings function operation

Car Settings function operation

In the [main interface] Touch [Car Settings] icon to enter the following interface:



18.1 Audio Settings

Drag the [] icon, can be arbitrarily adjust the treble midrange bass volume. Touch [] icon to switch to customize jazz classical rock and other volume effects. Touch [] icon to turn on off loudness. Touch [Restore Default] icon to restore the initial state.

18.1 Audio Settings

18.2 Sound Field Settings

Touch [Left] and [Right] icon, can be left and right to adjust the volume balance. Touch [before] and [after] icon, can be up and down to adjust the volume balance. Touch [] icon, you can quickly set up audio control center point.

18.3 Basic Settings

Touch [Close Time Setting] icon to set the off-screen time.

Touch [] icon to set parking headlight detection key tone mute function reversing switch.

18.4 Navigation Settings

Navigation path has been set up at the factory, please do not enter the navigation interface is set free to change the path. Otherwise, it may cause abnormal program.

18.5 Backlight Settings

Drag the [] icon, the effect can be adjusted backlight settings.

18.6 Radio

Choose your favorite country radio area.

18.7 Default Drag the [] icon to adjust the default volume.

18.8 Default

through the original steering wheel, the machine can also be controlled. Original car steering wheel control line positive electrode, a negative electrode and a positive electrode side of the machine control line, a negative electrode connected. One by one by pressing the steering wheel above Key, and records the order, click on the corresponding function settings to save settings.

18.9 Voice Settings

in the [Voice Settings] screen, slide this icon, you can control the voice switches.

18.10 factory setting

In the [factory setting] screen, touch [Restore Factory] icon, enter the password 1234 to enter. Touch Erase everything icon to restore the system to factory settings, the system will automatically restart. Third-party programs after the system is restored to factory settings, and all have been installed User data will be lost.

18. Funcionamiento de la función de configuración del coche

Funcionamiento de la función de configuración del coche

En la [interfaz principal] Toque el icono [Configuración del automóvil] para ingresar a la siguiente interfaz:



18.1 Configuración de sonido

Arrastre el icono [], se puede ajustar arbitrariamente el volumen de graves agudos de rango medio. Toque el icono [] para cambiar y personalizar jazz, rock clásico y otros efectos de volumen. Toque el icono [] para desactivar el volumen. Toque el icono [Restaurar predeterminado] para restaurar el estado inicial.

18.1 Configuración de sonido

18.2 Configuración del campo de sonido

Toque el icono [Izquierda] y [Derecha], puede ser izquierda y derecha para ajustar el balance de volumen.

Toque el icono [antes] y [después], puede subir y bajar para ajustar el balance de volumen.

Toque el icono [], puede configurar rápidamente el punto central de control de audio.

18.3 Configuración básica

Toque el icono [Close Time Setting] para configurar el tiempo fuera de la pantalla.

Toque el icono [] para configurar el interruptor de inversión de la función de silenciamiento del tono de la tecla de detección de los faros del estacionamiento.

18.4 Configuración de navegación

La ruta de navegación se configuró en la fábrica, no ingrese la interfaz de navegación está libre para cambiar la ruta. De lo contrario, puede causar un programa anormal.

18.5 Configuración de la luz de fondo

Arrastre el icono [], el efecto se puede ajustar la configuración de la luz de fondo.

18.6 Radio

Elige la zona de radio de tu país favorita.

18.7 Predeterminado Arrastre el icono [] para ajustar el volumen predeterminado.

18.7 Predeterminado

A través del volante original, la máquina también se puede controlar. Electrodo positivo de la línea de control del volante del coche Original, un electrodo negativo y un lado del electrodo positivo de la línea de control de la máquina, un electrodo negativo conectado. Uno por uno presionando el volante sobre la tecla y registra el pedido, haga clic en la configuración de la función correspondiente para guardar la configuración.

18.9 Configuración de voz

En la pantalla [Configuración de voz], deslice este icono, puede controlar los interruptores de voz.


18.10 configuración de fábrica

En la pantalla [configuración de fábrica], toque el icono [Restaurar fábrica], ingrese la contraseña 1234 para ingresar. Toque el icono Borrar todo para restaurar el sistema a la configuración de fábrica, el sistema se reiniciará automáticamente. Los programas de terceros después de que el sistema se restablezca a la configuración de fábrica y se hayan instalado todos, se perderán los datos del usuario.

19. CAMERA functional operation

When the unit is connected to CAMERA video input, [all applications] interface touch [CAMERA] icon to enter the following interface:


1. When the car engine is not connected with the equipment, in CAMERA screen shows no signal. When the device is connected with the car engine in the CAMERA screen displays load, the normal display front camera screen after loading.
2. Native CAMERA video input display function only, not with CAMERA serial communication control device functions.

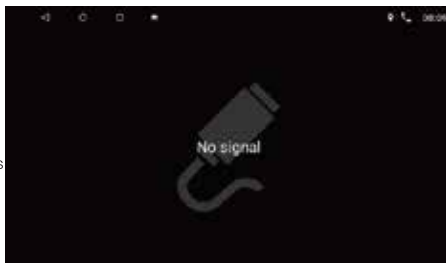

19. Operación funcional de la CÁMARA

Cuando la unidad está conectada a la entrada de video CÁMARA, la interfaz [todas las aplicaciones] toca el icono [CÁMARA] para ingresar a la siguiente interfaz:

1. Cuando el motor del automóvil no está conectado con el equipo, en la pantalla de la CÁMARA no se muestra ninguna señal. Cuando el dispositivo se conecta con el motor del automóvil en la pantalla de la CÁMARA, se muestra la carga, la pantalla de la cámara frontal de visualización normal después de la carga.
2. Solo función de visualización de entrada de video de CÁMARA nativa, no con funciones de dispositivo de control de comunicación en serie de CÁMARA.

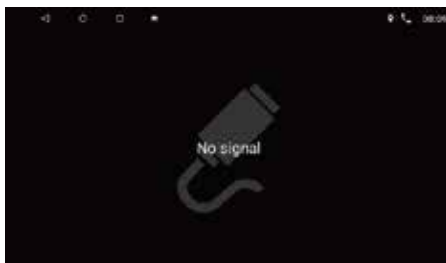

20. Troubleshooting functional

Common Troubleshooting Guide

Fault 1: You can not boot

Cause: The power supply fuse burned

Solution: Replace the same type fuse

Fault 2: Can not boot

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 3: After the ignition switch is turned off, the settings are lost

Reason: replace the battery or fuse

Solution: Re-setting information and save the

Fault 4: Poor income units

Reason: The radio signal is weak

Solution: The car is moved to another location search again

Fault 5: No image

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 6: Driving the process can not view the image

Cause: driving the process is not allowed to view images

Solution: Plug the car to a safe location, the car stalls placed in the Prange, pull handbrake

20. Solución de problemas funcional

Guía de solución de problemas comunes

Error 1: no puede arrancar

Causa: El fusible de la fuente de alimentación se quemó

Solución: Reemplazar el mismo tipo de fusible

Error 2: no se puede iniciar

Motivo: Otros factores que contribuyen a que el microprocesador no funcione

Solución alternativa: después de 10S, el host se reinicia

Error 3: después de apagar el interruptor de encendido, se pierden los ajustes

Razón: reemplace la batería o el fusible

Solución: Restablecer la información y guardar la

Error 4: Unidades de bajos ingresos

Motivo: La señal de radio es débil

Solución: El coche se ha movido a otra ubicación buscar de nuevo

Error 5: Sin imagen

Razón: Otros factores que contribuyen a que el microprocesador no funcione

Solución alternativa: después de 10S, el host se reinicia

Error 6: Conducir el proceso no puede ver la imagen

Causa: no se permite conducir el proceso para ver imágenes

Solución: conecte el automóvil a un lugar seguro, el automóvil se detiene en el Prange, tire del freno de mano



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE

PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Where the Party Begins!

We would love to hear about your FX-770 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

